


SHARP

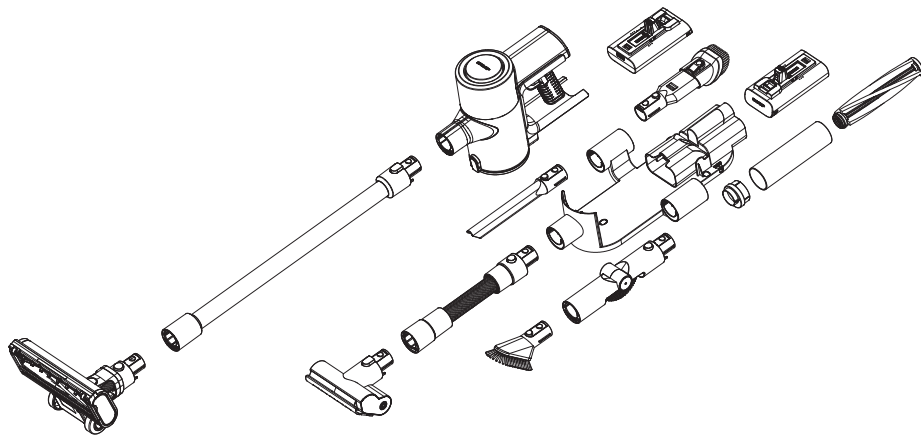









## Quick Start Guide Hướng Dẫn Sử Dụng Nhanh

EC-SV28V-B

Stick vacuum  
Máy Hút Bụi

\*Product images are for illustration purpose only. Actual product may vary.

SHARP

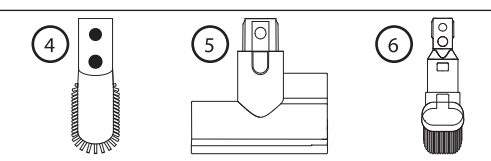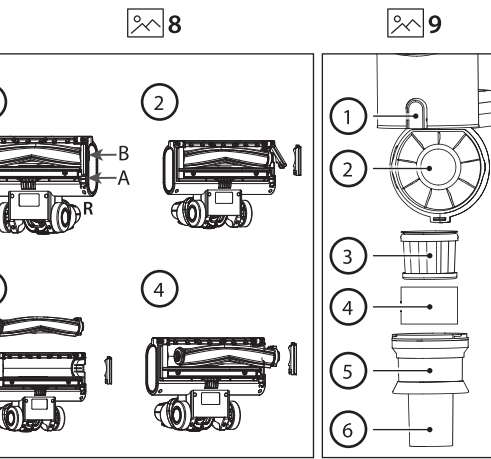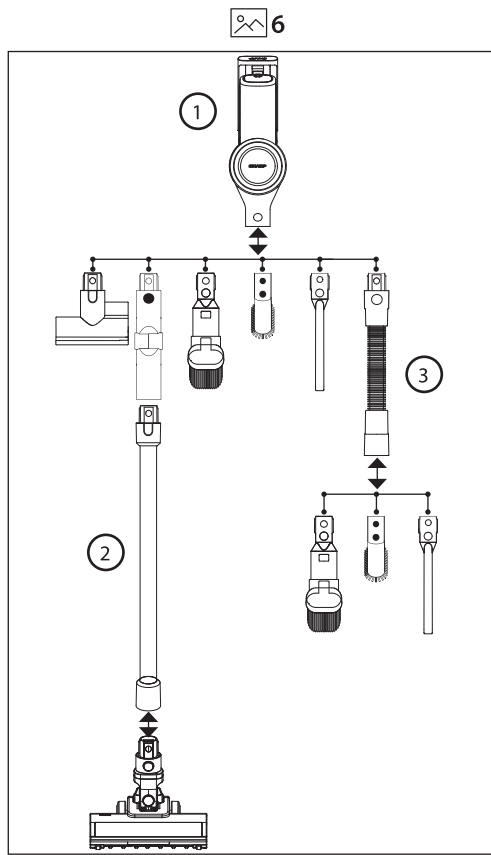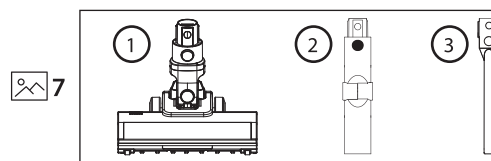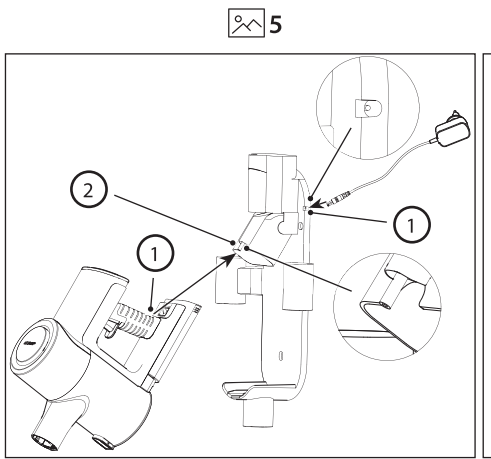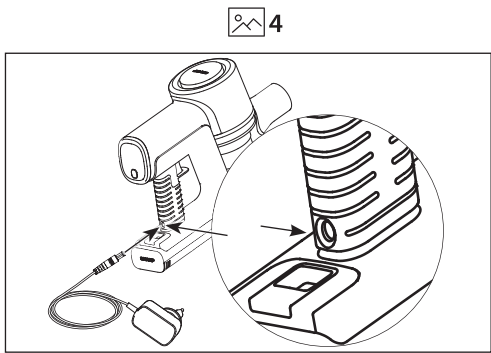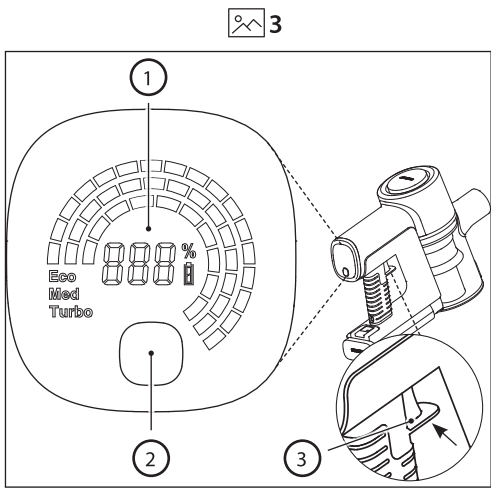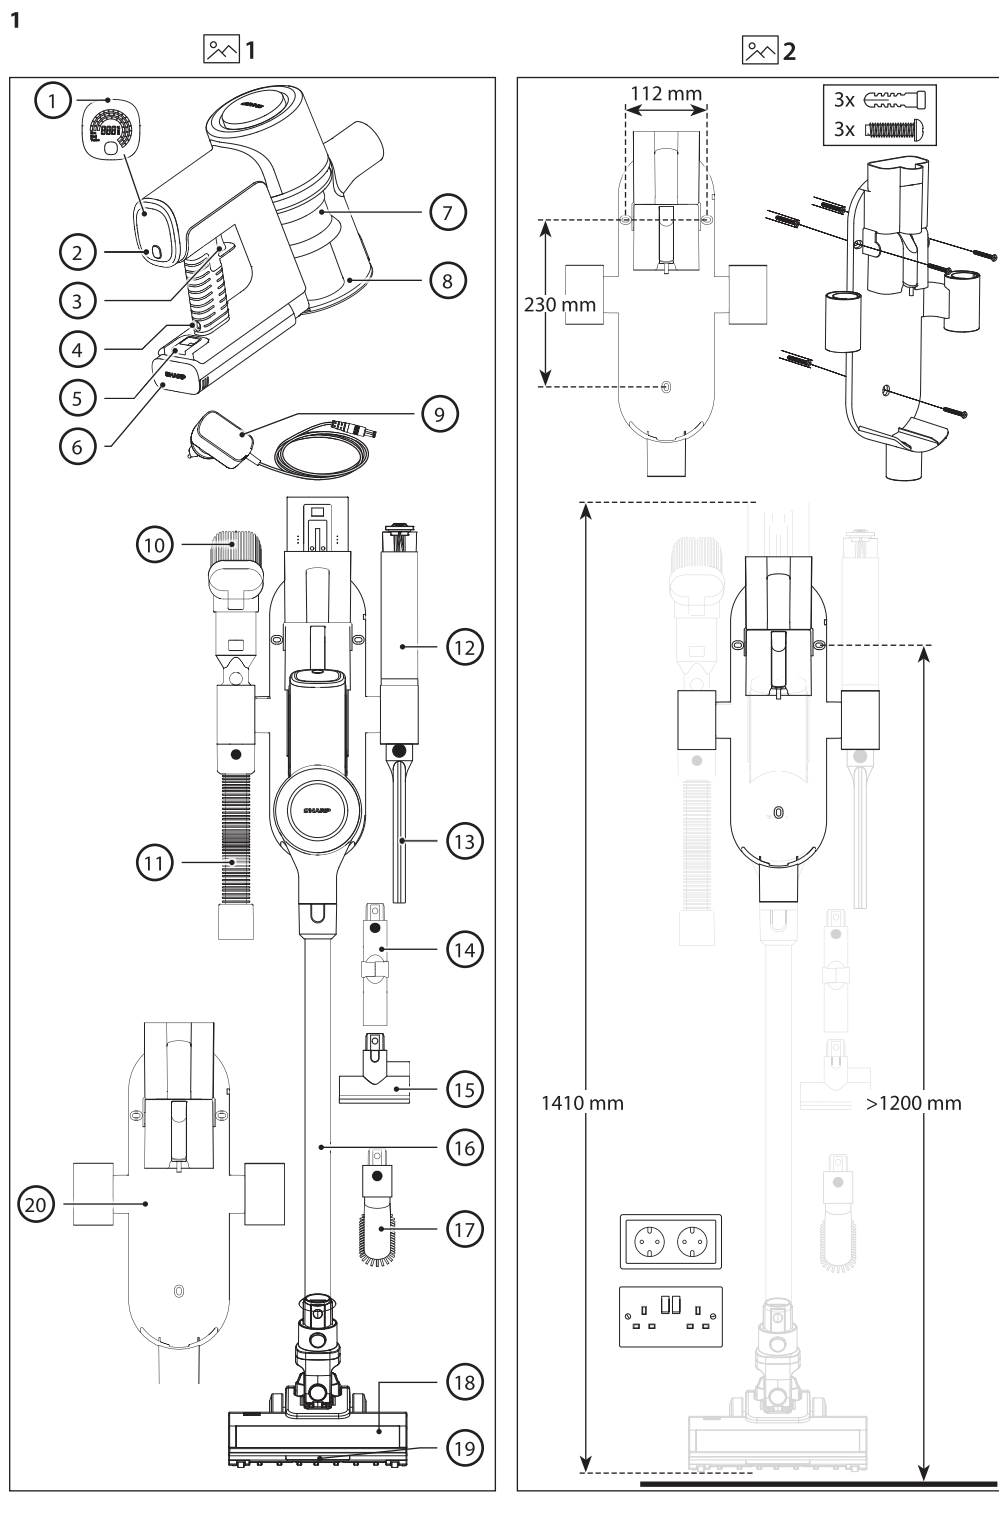

### Important safety instructions

#### READ CAREFULLY BEFORE USE – SAVE THESE INSTRUCTIONS.

**WARNING:** To reduce risk of injury, fire, electrical shock, or property damage from improper use of this appliance, carefully follow these instructions. This unit contains electrical connections and moving parts that could present risk if instructions are not followed.

- This symbol instructs the user to consult the user manual for further safety, operational and maintenance related information.
- Refers to class II equipment. This symbol indicates that this product has a double insulation system and does not require a safety connection to electrical earth (ground).
- Refers to alternating current (AC). This symbol indicates that the rated voltage marked with the symbol is AC voltage.
- Refers to direct current (DC). This symbol indicates that the rated voltage marked with the symbol is DC voltage.
- For indoor use only
- Energy efficiency marking with level VI
- Polarity of d.c. power connector

### General cautions

- There are NO serviceable parts. DO NOT attempt to make your own repairs.
- DO NOT use this stick vacuum on any liquids.
- DO NOT immerse vacuum cleaner or any of its parts and accessories in water or other liquids.
- DO NOT use if vacuum, charger, wall caddy or power cord is damaged.
- Inspect vacuum, wall caddy and power cord for any damage before use to avoid fire, explosion, or injury.
- DO NOT use outdoors or on wet surfaces. Use only on dry surfaces.
- If vacuum cleaner is not working, or has been dropped, damaged, left outdoors, or immersed in water, DO NOT use it.
- DO NOT handle the AC adapter or vacuum cleaner if hands are wet.
- DO NOT leave vacuum powered on when not in use or unattended.
- Keep the stick vacuum, power cord and AC adapter away from hot surfaces.
- Turn off the stick vacuum before charging.
- Use only the wall caddy and AC adapter provided with this product.
- Always use the wall caddy on a flat and stable surface.
- DO NOT incinerate this appliance as the lithium-ion battery may explode and cause a fire.
- DO NOT vacuum up hard or sharp objects such as glass, nails, screws, or coins that could cause damage.
- DO NOT vacuum sawdust, drywall dust, ashes, or embers.
- DO NOT vacuum objects that are smoking or burning, such as hot coals, cigarette or cigar butts, or matches.
- DO NOT vacuum toxic chemicals such as chlorine bleach, ammonia, or drain cleaner.
- DO NOT use the vacuum in an enclosed space where toxic or combustible vapors are present.
- Use extra care when cleaning on stairs.
- DO NOT stretch or strain the power cord. Keep wall caddy and power cord away from areas and where it will not be stepped on or tripped over. Do not run over cord with the vacuum or close a door on it.

- An extension cord is not recommended to be used with this appliance.
- Unplug the charging cord when not in use for extended periods of time.
- Only use the AC adapter and removable lithium-ion battery pack provided with this product. Only replace the battery pack with one specified for this unit.
- Other types of battery pack will not be compatible and may cause damage or injury.
- DO NOT carry by the cord or disconnect from an outlet incorrectly.
- Always grasp the AC adapter at the power outlet and pull it straight out to disconnect.
- Use this product only as directed in this Quick Start Guide and the User Manual.
- Always turn off the vacuum before picking it up or carrying it, attaching, or detaching the AC adapter, filter, or accessory tools.
- DO NOT place any objects into openings or obstruct openings.
- DO NOT use if any opening is blocked; keep free of dust, lint, hair, or anything that could restrict airflow.
- KEEP OUT OF REACH OF CHILDREN. This vacuum is not a toy, and must not be played with, cleaned, or operated by children or persons with reduced physical or mental capabilities.
- DO NOT operate without the filter installed.
- Keep the nozzle away from face, hair, fingers, or loose jewellery and clothing.
- Only use the attachments provided with this product.
- DO NOT charge at temperatures below 10°C or above 40°C. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
- Do not spray or apply any fragrances to the filter. Some fragrances contain chemicals that are flammable and can cause fire.
- Store the appliance indoors. DO NOT use or store it below 3°C. The appliance must be at room temperature before operating it.
- Do not spray or apply any fragrances to the filter. Some fragrances contain chemicals that are flammable and can cause fire.

### FILTERS/ACCESSORIES

#### BEFORE USING:

- Make sure the filter is completely dry after cleaning.
- Make sure that the filter is reinstalled after maintenance.
- Keep accessories free of blockages.
- Clean filter periodically to keep the vacuum running efficiently every time.
- Always turn the vacuum off before connecting or disconnecting the motorized brush bar or mini motorized brush bar.

### Battery pack caution

The Lithium Ion battery pack included with this product is sealed and under normal circumstances does not pose any safety concerns. In the unlikely event that the battery pack becomes damaged causing liquid to leak, **DO NOT touch the liquid and observe the following precautions:**

- Skin contact can cause irritation. Wash with soap and water
- Inhalation can cause respiratory irritation. Breathe fresh air and seek medical advice.
- Eye contact can cause irritation. Flush eyes with fresh water for 15 minutes. Seek medical attention.
- Wear gloves to dispose leaking battery following local ordinances and regulations.

The battery used in your product consists of six 3.6V Lithium-Ion cells. The battery is also referred to as a Battery Pack.

### Hướng dẫn an toàn quan trọng

#### ĐỌC KỸ TRƯỚC KHI SỬ DỤNG – LƯU LẠI NHỮNG ĐIỀU HƯỚNG DẪN NÀY.

**CẢNH BÁO:** Để giảm nguy cơ thương tích, hỏa hoạn, điện giật hoặc thiệt hại tài sản do sử dụng thiết bị này không đúng cách, hãy cẩn thận làm theo các hướng dẫn sau. Thiết bị này chứa các kết nối điện và các bộ phận chuyển động có thể gây nguy hiểm nếu không tuân theo hướng dẫn.

- Biểu tượng này hướng dẫn người dùng tham khảo sách hướng dẫn sử dụng để biết thêm thông tin về an toàn, vận hành và bảo trì.
- Tham khảo thiết bị loại II. Biểu tượng này cho biết sản phẩm này có hệ thống cách điện kép và không yêu cầu kết nối an toàn với đất (mặt đất).
- Chỉ dòng điện xoay chiều (AC). Biểu tượng này cho biết điện áp định mức được đánh dấu bằng biểu tượng là điện áp AC.
- Chỉ dòng điện một chiều (DC). Biểu tượng này cho biết điện áp định mức được đánh dấu bằng biểu tượng là điện áp DC.
- Chỉ sử dụng trong nhà
- Đánh dấu hiệu suất năng lượng với cấp độ VI
- Cực tính của đầu nối nguồn điện một chiều

### Cảnh Báo Chung

- KHÔNG có bộ phận nào có thể bảo dưỡng được. KHÔNG cố gắng tự sửa chữa.
- KHÔNG sử dụng máy hút bụi cầm tay này trên bất kỳ chất lỏng nào.
- KHÔNG nhúng máy hút bụi hoặc bất kỳ bộ phận và phụ kiện nào của máy vào nước hoặc các chất lỏng khác.
- KHÔNG sử dụng máy hút bụi, bộ sạc, hộp đựng tường hoặc dây nguồn bị hỏng.
- Kiểm tra máy hút bụi, giá treo tường và dây nguồn xem có hư hỏng gì không trước khi sử dụng để tránh hỏa hoạn, nổ hoặc thương tích.
- KHÔNG sử dụng ngoài trời hoặc trên bề mặt ướt.
- Chỉ sử dụng trên bề mặt khô.
- Nếu máy hút bụi không hoạt động, hoặc bị rơi, hỏng, để ngoài trời hoặc ngâm trong nước, KHÔNG sử dụng máy.
- KHÔNG sử dụng bộ đổi nguồn hoặc máy hút bụi khi tay ướt.
- KHÔNG để máy hút bụi đang bật khi không sử dụng hoặc không có người trông coi.
- Giữ máy hút bụi cầm tay, dây nguồn và bộ đổi nguồn AC tránh xa các bề mặt nóng.
- Tắt máy hút bụi cầm tay trước khi sạc.
- Chỉ sử dụng hộp đựng ổ cắm tường và bộ đổi nguồn AC đi theo máy.
- Luôn sử dụng giá treo tường trên bề mặt phẳng và chắc chắn.
- KHÔNG đốt thiết bị này vì pin lithium-ion có thể phát nổ và gây ra hỏa hoạn.
- Kiểm tra máy hút bụi, giá treo tường và dây nguồn xem có hư hỏng gì không trước khi sử dụng để tránh hỏa hoạn, nổ hoặc thương tích.
- KHÔNG hút bụi từ cửa, bộ tường thạch cao, tro hoặc than hồng.
- KHÔNG hút bụi các vật đang bốc khói hoặc cháy, chẳng hạn như than nóng, đầu thuốc lá hoặc xi gà hoặc diêm.
- KHÔNG hút các hóa chất độc hại như thuốc tẩy clo, amoniac hoặc chất tẩy cứng.
- KHÔNG sử dụng máy hút bụi trong không gian kín có hơi độc hại hoặc dễ cháy.
- Cẩn thận hơn khi vệ sinh cấu trúc.

- KHÔNG kéo căng hoặc làm căng dây nguồn. Để hộp đựng và dây nguồn cách xa các khu vực và nơi không bị giẫm đạp hoặc vấp ngã. Không chạy máy hút bụi qua dây hoặc đồng của trên dây.
- Không nên sử dụng dây nối dài với thiết bị này.
- Rút dây sạc khi không sử dụng trong thời gian dài.
- Chỉ sử dụng bộ đổi nguồn AC và bộ pin lithium-ion có thể tháo rời đi kèm với sản phẩm này. Chỉ thay thế bộ pin bằng loại được chỉ định cho thiết bị này.
- Các loại pin khác sẽ không tương thích và có thể gây hư hỏng hoặc thương tích.
- KHÔNG mang theo dây hoặc ngắt kết nối khỏi ổ cắm không đúng cách.
- Luôn cắm bộ đổi nguồn AC ở ổ cắm điện và kéo thẳng ra để ngắt kết nối.
- Chỉ sử dụng sản phẩm này theo hướng dẫn trong Hướng dẫn bắt đầu nhanh này và Sổ tay hướng dẫn sử dụng.
- Luôn tắt máy hút bụi trước khi nhấc máy lên hoặc mang theo, lắp hoặc tháo bộ đổi nguồn AC, bộ lọc hoặc các dụng cụ phụ kiện.
- KHÔNG đặt bất kỳ vật nào vào các lỗ mở hoặc các trở các lỗ mở.
- KHÔNG sử dụng nếu bất kỳ lỗ mở nào bị chặn, tranh bì, xơ vải, tóc hoặc bất kỳ thứ gì có thể hạn chế luồng không khí.
- Biểu tượng này cho biết điện áp định mức được đánh dấu bằng biểu tượng là điện áp DC.
- ĐỂ XA TẮM TAY TRẺ EM. Máy hút bụi này không phải là đồ chơi và trẻ em hoặc người có năng lực thể chất hoặc tinh thần hạn chế không được chơi, vệ sinh hoặc vận hành máy.
- KHÔNG vận hành khi chưa lắp bộ lọc.
- Để với phạm vi xa mặt, tóc, ngón tay hoặc làm mất độ trang sức và quần áo.
- Chỉ sử dụng các phụ kiện đi kèm với sản phẩm này.
- KHÔNG sạc ở nhiệt độ dưới 10°C hoặc trên 40°C. Sạc không đúng cách hoặc ở nhiệt độ ngoài phạm vi quy định có thể làm hỏng pin và tăng nguy cơ hỏa hoạn.
- Bảo quản thiết bị trong nhà. KHÔNG sử dụng hoặc bảo quản ở nhiệt độ dưới 3°C.
- Không tích tụ bụi bẩn hoặc chất lỏng nào vào bộ lọc. Một số loại nước hoa có chứa hóa chất dễ cháy và có thể gây ra hỏa hoạn.

### BỘ LỌC/PHỤ KIỆN

#### TRƯỚC KHI SỬ DỤNG:

- Tiếp xúc với da có thể gây kích ứng. Rửa bằng xà phòng và nước.
- Hít phải có các phụ kiện không bị tắc nghẽn.
- Vệ sinh bộ lọc định kỳ để máy hút bụi luôn hoạt động hiệu quả.
- Luôn tắt máy hút bụi trước khi kết nối hoặc ngắt kết nối thành chốt có động cơ hoặc thanh chốt có động cơ mini.

### Thận trọng với bộ pin

Bộ pin Lithium Ion đi kèm với sản phẩm này được niêm phong và trong những trường hợp bình thường không gây ra bất kỳ mối lo ngại nào về an toàn. Trong trường hợp không mong muốn là bộ pin bị hỏng khiến chất lỏng rò rỉ, **KHÔNG chạm vào chất lỏng và tuân thủ các biện pháp phòng ngừa sau:**

- Tiếp xúc với da có thể gây kích ứng. Rửa bằng xà phòng và nước.
- Hít phải có các phụ kiện không bị tắc nghẽn.
- Vệ sinh bộ lọc định kỳ để máy hút bụi luôn hoạt động hiệu quả.
- Luôn tắt máy hút bụi trước khi kết nối hoặc ngắt kết nối thành chốt có động cơ hoặc thanh chốt có động cơ mini.

Pin được sử dụng trong sản phẩm của bạn bao gồm sáu cell Lithium-Ion 3.6V. Pin cũng được gọi là Bộ pin.