

SHARP

MÁY VẮT CAM

Citrus Juicer

Model No.: EJ-J408-WH



HƯỚNG DẪN SỬ DỤNG

Instruction Manual

220-240V~50-60Hz,40W


HƯỚNG DẪN SỬ DỤNG

Máy vắt cam

EJ-J408-WH

Khách hàng thân mến!

Cảm ơn các bạn đã mua sản phẩm của chúng tôi. Đây là loại sản phẩm vắt nước trái cây có mùi được thiết kế bắt mắt và được làm từ các thành phần chất lượng cao. Chúng tôi hy vọng bộ sản phẩm này sẽ hỗ trợ bạn và tạo thuận lợi trong việc sử dụng

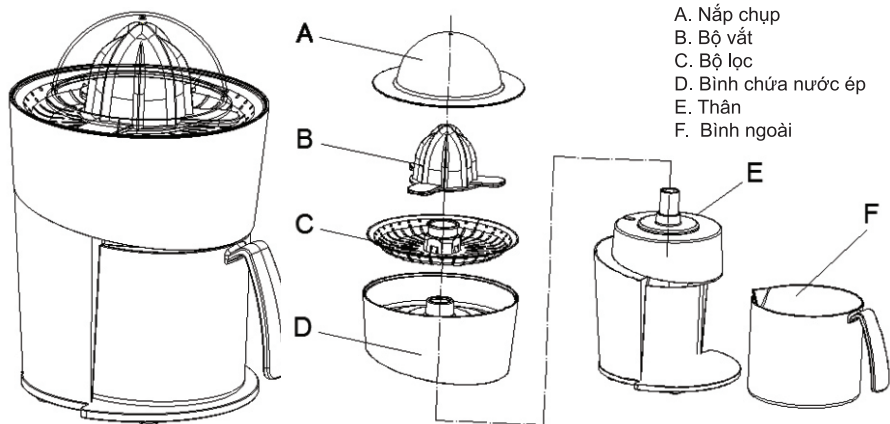

Hướng dẫn quan trọng

Khi sử dụng thiết bị điện, để giảm nguy cơ hỏa hoạn, điện giật hoặc gây thương tích cho người sử dụng. Các biện pháp phòng ngừa và an toàn cơ bản cũng cần được tuân thủ, bao gồm những điều sau đây: Vui lòng chú ý các điểm bên dưới

- Đọc kỹ các nội dung hướng dẫn cẩn thận, ngay cả khi bạn đã quen thuộc với thiết bị.
- Sử dụng nguồn điện cho thiết bị phải đảm bảo đúng thông số kỹ thuật. Kiểm tra công suất đầu ra của thiết bị và sử dụng thiết bị riêng biệt với các thiết bị khác
- Đặt sản phẩm nơi khô ráo và trên bề mặt phẳng. Dùng vải khô khi vệ sinh thân máy.
- Thiết bị phù hợp với các loại trái cây mềm, như cam, v.v. Và không thể đáp ứng các loại trái cây cứng để tránh bị hỏng.
- Tắt nguồn điện cho các vấn đề như sau:
 - a. Lưỡi dao làm việc không đúng
 - b. Âm thanh lạ khi sử dụng
 - c. Vệ sinh
 - d. Sử dụng xong

- Tránh xa tầm tay trẻ em
- Dung tích của sản phẩm không được vượt quá mức đo này khi hoạt động
- Không được nhúng thiết bị vào nước
- Nếu dây nguồn bị hư hỏng, phải thay thế bởi nhà sản xuất, hoặc trung tâm dịch vụ SHARP uỷ quyền, hoặc người có trình độ tương tự để tránh nguy hiểm.
- Thiết bị này được thiết kế chỉ để sử dụng trong hộ gia đình

PHƯƠNG PHÁP SỬ DỤNG

- Đặt bình ngoài vào chân đế
- Gắn khay hứng nước trái cây vào trục truyền động của bộ phận đế
- Đặt bộ lọc cặn vào trong khay hứng nước trái cây
- Lắp bộ vắt trái cây vào trục truyền động của bộ phận đế
- Cắm phích cắm vào nguồn điện
- Cắt trái cây sau khi được làm sạch và đặt lên đỉnh của bộ vắt, dùng tay ấn mạnh trái cây và làm cho bộ vắt quay
- Trục truyền động sẽ bắt đầu quay tự động sau khi nhấn tay lên bộ vắt Thiết bị sẽ tắt khi áp khi không nhấn tay
- Khi vắt số lượng lớn trái cây, bộ lọc cặn phải được làm sạch theo thời gian khi cần thiết.
- Đảm bảo rút phích cắm ra khỏi ổ cắm sau khi sử dụng

VỆ SINH VÀ BẢO QUẢN

- Trước khi vệ sinh thiết bị, rút phích cắm ra khỏi ổ cắm.
- Để tránh nguy cơ bị điện giật, không làm sạch bộ phận đế hoặc dây nguồn bằng nước và **không nhúng chúng vào nước.**
- Không sử dụng chất mài mòn, dung dịch tẩy rửa mạnh hoặc bàn chải cứng để làm sạch.
- Bộ chân đế có thể được lau bằng một miếng vải hơi ẩm, không có xơ.
- Các bộ phận theo kèm phải được làm sạch hoàn toàn bằng nước nóng và chất tẩy nhẹ. Khay lọc cặn cũng có thể được làm sạch trong máy rửa chén.
- Tất cả các bộ phận phụ kiện tháo rời (trừ đế - bộ phận motor có kèm dây điện) đều có thể vệ sinh bằng máy rửa chén
- Khi rửa các bộ phận phụ kiện với nước nóng thì nhiệt độ không vượt quá 70°C
- Không sử dụng bất kỳ chất tẩy rửa làm mòn hoặc mài mòn

XỬ LÝ



Biểu tượng này cho thấy rằng sản phẩm này không nên được xử lý với chất thải gia đình khác trên toàn EU. Để ngăn chặn tác hại đối với môi trường hoặc sức khỏe con người từ việc xử lý chất thải không được kiểm soát, hãy tái chế nó một cách có trách nhiệm để thúc đẩy việc tái sử dụng bền vững các nguồn nguyên liệu. Để trả lại thiết bị đã sử dụng của bạn, vui lòng sử dụng hệ thống trả lại và thu tiền hoặc liên hệ với nhà bán lẻ nơi sản phẩm được mua. Họ có thể lấy sản phẩm này để tái chế an toàn môi trường.

THÔNG SỐ KỸ THUẬT

Tên sản phẩm: EJ-J408-WH
Điện áp: 220-240V/ 50Hz-60Hz
Công suất: 40W
Dung tích: 0.85L

Dear Customer!

Thanks for buy our product. This kind of juice extractor is excellent in design and made out of high qualitative components.We hope this set can take with you be well and convenience.

Structure Illustration

A.Top cover


B.Juicer

C.Filter

D.Juice collect tray

E.Body

F.Cup

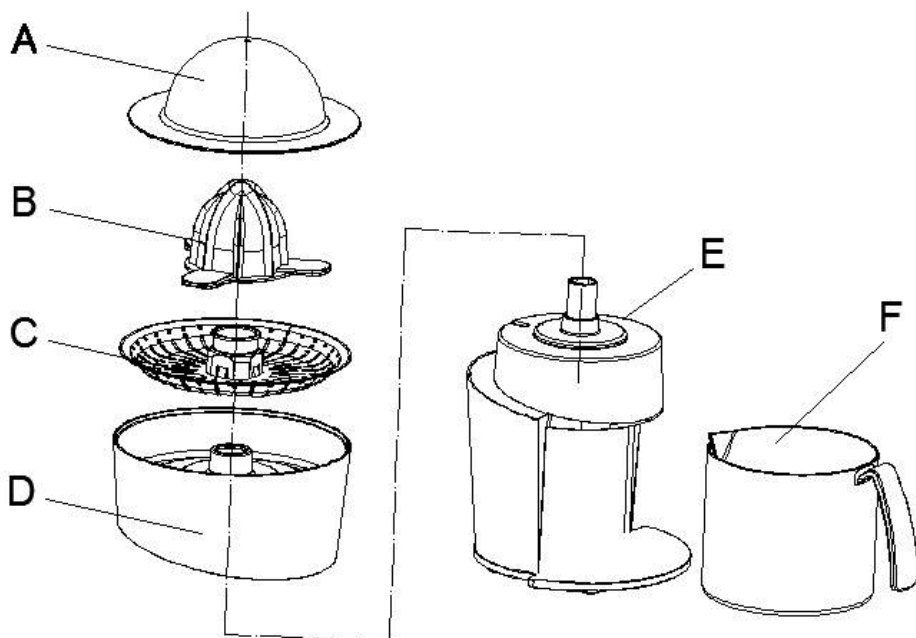

Important Instruction

When using electrical appliances, in order to reduce the risk of fire,electric shock, or injury to persons,basic safety precautions should also be followed,including the following: Please kindly pay your attention to below points:

- Read all instructions carefully, even if you are familiar with the appliance.
- The electric power supply should come from a properly wired outlet.Also,check the capacity of the out and use the appliance separately from other equipment.Always ensure the voltage to be used corresponds to the voltage stated on the unit .

- Put the electric products in dry and stable flat.Using dried cloth when cleaning the machinery body.
- The appliance is suitable to soft fruits,such as orange etc. And can't meet the hard fruits so as to avoid being broken because of the over.
- Shut off the electric power for the following happenings:
 - a. The turning blades working is not correct.
 - b. The uncommon voice when using.
 - c. Cleaning.
 - d. Finish using.
- Keep it away from the children and avoid accident
- This appliance rate capacity, do not excess this scale on working
- After use unplug from the outlet.When unplug,always grasp the plug and unplug it from the outlet.
- Do not put the whole or parts of body into water.
- If the supply cord is damaged, must be replaced by the manufacture or its service agent or a similarly qualified person in order to order to avoid a hazard.
- This appliance is designed only for household use

Using Method

- Place the cup in the base unit.
- Attach the juice collect tray to the drive shaft of the base unit.
- Place the filter in the juice collect tray.
- Fit the juicer on to the drive shaft of the base unit.
- Insert the plug into a suitable wall socket.
- Cut the citrus fruit in half and push one of the halves lightly down on to the cone with the cut section facing downwards.
- The drive shaft will start rotating automatically once pressure is applied to the cone.The appliance switches off when pressure on the juicer is lifted
- When processing larger quantities of fruit,the pulp sieve must be emptied from time to time as necessary.
- Ensure the plug is removed from the wall socket after use

Clean and care

- Before cleaning the appliance,remove the plug from the wall socket.
- To avoid the risk of electric shock,do not clean the base unit or power cord with water,and do not immerse them in water .
- Do not use abrasives,harsh cleaning solutions or hard brushes for cleaning.
- The base unit may be wiped with a slightly damp,lint –free cloth.
- The attachments should be thoroughly cleaned using hot water and a mild detergent.The filter may also be cleaned in a dish-washer.
- All assemble parts (except the base unit - motor unit with power cord) can be cleaned in dishwasher.
- When clean accessory parts with hot water, the temperature should not exceed 70 ° C.

Do not use any astringent or abrasive cleaning agents.

Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Technology Parameter

Model name : EJ-J408-WH

Voltage : 220-240V/ 50Hz-60Hz

Power : 40W

Capacity : 0.85L