


# SHARP

Quan trọng



TIẾNG VIỆT

## LÒ VI SÓNG HƯỚNG DẪN SỬ DỤNG

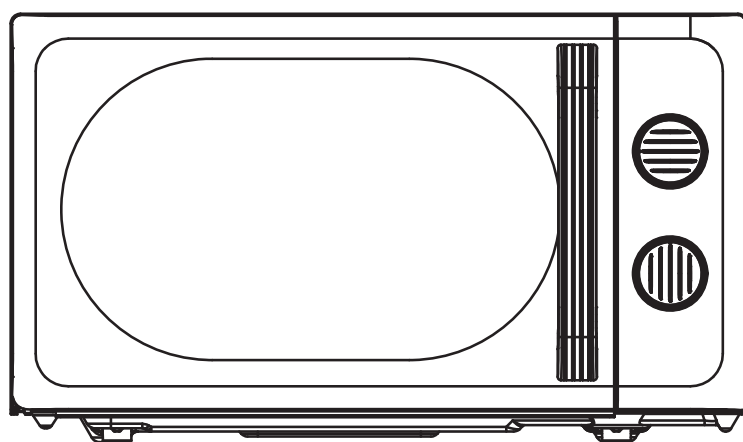

**Model : R-2041ER-CW  
R-2042ER-RB**

**700W**

Vui lòng đọc kỹ hướng dẫn sử dụng này trước khi lắp đặt và vận hành lò vi sóng.  
**LÀ MỘT PHẦN CỦA CHÍNH SÁCH CẢI TIẾN LIÊN TỤC, CHÚNG TÔI BẢO LƯU QUYỀN  
SỬA ĐỔI THIẾT KẾ VÀ CÁC THÔNG SỐ KỸ THUẬT MÀ KHÔNG CẦN THÔNG BÁO.**

# CÁC BIỆN PHÁP PHÒNG NGỪA ĐỂ TRÁNH TIẾP XÚC QUÁ MỨC VỚI NĂNG LƯỢNG VI SÓNG

1. Không cố gắng vận hành lò vi sóng này khi cửa mở vì hoạt động mở cửa có thể gây hại cho việc tiếp xúc với năng lượng vi sóng. Điều quan trọng là không được làm hỏng hoặc phá hỏng các khóa liên động an toàn.
2. Không đặt bất kỳ vật gì giữa mặt trước của lò vi sóng và cửa lò hoặc không để bụi bẩn hoặc chặn chất tẩy rửa tích tụ trên bề mặt gioăng kín.
3. Không vận hành lò vi sóng nếu lò bị hỏng. Điều đặc biệt quan trọng là cửa lò phải đóng đúng cách và không có hư hỏng nào xảy ra như:
  - a. Cửa (cong),
  - b. Bản lề và chốt (bị hỏng hoặc bị lỏng),
  - c. Gioăng cửa và bề mặt gioăng.
4. Không được phép điều chỉnh hoặc sửa chữa lò vi sóng ngoại trừ nhân viên bảo dưỡng có trình độ chuyên môn.

## NỘI DUNG

|                                                                                |   |
|--------------------------------------------------------------------------------|---|
| CÁC BIỆN PHÁP PHÒNG NGỪA ĐỂ TRÁNH TIẾP XÚC QUÁ MỨC VỚI NĂNG LƯỢNG VI SÓNG..... | 1 |
| CÁC HƯỚNG DẪN AN TOÀN QUAN TRỌNG.....                                          | 2 |
| HƯỚNG DẪN LẮP ĐẶT .....                                                        | 4 |
| NHIỀU TÀN SỐ VÔ TUYẾN .....                                                    | 4 |
| NGUYÊN LÝ NẤU ĂN BẰNG VI SÓNG .....                                            | 4 |
| HƯỚNG DẪN NÓI ĐẤT.....                                                         | 5 |
| TRƯỚC KHI BẠN GỌI DỊCH VỤ SỬA CHỮA .....                                       | 5 |
| HƯỚNG DẪN SỬ DỤNG DỤNG CỤ NẤU .....                                            | 5 |
| THÔNG SỐ KỸ THUẬT .....                                                        | 6 |
| TÊN PHẦN.....                                                                  | 6 |
| BẢNG ĐIỀU KHIỂN .....                                                          | 7 |
| CÔNG SUẤT.....                                                                 | 7 |
| NÚM HẸN GIỜ.....                                                               | 7 |
| NẤU ĂN BẰNG LÒ VI SÓNG.....                                                    | 7 |
| HOẠT ĐỘNG.....                                                                 | 8 |
| VỆ SINH VÀ CHĂM SÓC .....                                                      | 8 |

# CÁC HƯỚNG DẪN AN TOÀN QUAN TRỌNG

Khi sử dụng thiết bị điện, cần tuân thủ các biện pháp phòng ngừa an toàn cơ bản, bao gồm:

**CẢNH BÁO !** -- Để giảm nguy cơ bỏng, điện giật, hỏa hoạn, thương tích cho người hoặc tiếp xúc với năng lượng vi sóng quá mức:

1. Chỉ sử dụng thiết bị này cho mục đích sử dụng đã nêu trong hướng dẫn. Không sử dụng hóa chất hoặc hơi ăn mòn trong thiết bị này. Loại lò này được thiết kế riêng để làm nóng, nấu hoặc sấy khô thực phẩm. Không được thiết kế để sử dụng trong công nghiệp hoặc phòng thí nghiệm.
2. Không vận hành lò khi lò trống.
3. Không vận hành thiết bị này nếu dây hoặc phích cắm bị hỏng, nếu thiết bị không hoạt động bình thường hoặc nếu thiết bị bị hỏng hoặc rơi. Nếu dây nguồn bị hỏng, phải được thay thế bởi nhà sản xuất hoặc đại lý dịch vụ của nhà sản xuất hoặc người có trình độ tương đương để tránh nguy hiểm.
4. **CẢNH BÁO !** -- Chỉ cho phép trẻ em sử dụng lò vi sóng mà không cần giám sát khi đã có hướng dẫn đầy đủ để trẻ có thể sử dụng lò vi sóng một cách an toàn và hiểu được những nguy hiểm khi sử dụng không đúng cách.
5. Để giảm nguy cơ hỏa hoạn trong khoang lò:
  - Khi hâm nóng thức ăn trong hộp nhựa hoặc hộp giấy, hãy chú ý đến lò vi sóng vì có khả năng bắt lửa.
  - Tháo dây buộc xoắn ra khỏi túi giấy hoặc túi nhựa trước khi cho túi vào lò vi sóng.
  - Nếu thấy có khói, hãy tắt hoặc rút phích cắm của thiết bị và đóng chặt cửa để dập tắt ngọn lửa.
  - Không sử dụng khoang lò để bảo quản sản phẩm. Không để sản phẩm giấy, dụng cụ nấu ăn hoặc thực phẩm trong khoang khi không sử dụng.
  - Lò vi sóng được dùng để hâm nóng thức ăn và đồ uống. Việc sấy khô thức ăn hoặc quần áo và làm nóng miếng lót ẩm, dẹt, bọt biển, vải ẩm và các vật tương tự có thể dẫn đến nguy cơ thương tích, bắt lửa hoặc hỏa hoạn.
6. **CẢNH BÁO !** -- Không được đun nóng chất lỏng hoặc thực phẩm khác trong hộp kín vì chúng có thể phát nổ.
7. Việc đun nóng đồ uống bằng lò vi sóng có thể dẫn đến hiện tượng sôi bùng phát chậm, do đó phải cẩn thận khi cầm nắm vật chứa.
8. Không chiên thực phẩm trong lò vi sóng. Dầu nóng có thể làm hỏng các bộ phận và dụng cụ của lò vi sóng, thậm chí gây bỏng da.
9. Trứng còn nguyên vỏ và trứng luộc nguyên quả không nên được hâm nóng trong lò vi sóng vì chúng có thể phát nổ ngay cả sau khi quá trình hâm nóng bằng lò vi sóng đã kết thúc.
10. Chọc thủng các loại thực phẩm có lớp vỏ dày như khoai tây, bí đỏ, táo và hạt dẻ trước khi nấu.
11. Cần khuấy hoặc lắc bình sữa và lọ đựng thức ăn cho trẻ em và kiểm tra nhiệt độ trước khi dùng để tránh bị bỏng.
12. Dụng cụ nấu ăn có thể nóng lên do nhiệt truyền từ thức ăn được đun nóng. Có thể cần miếng lót nôi để cầm dụng cụ nấu ăn.
13. Cần kiểm tra đồ dùng để đảm bảo chúng phù hợp để sử dụng trong lò vi sóng.
14. **CẢNH BÁO !** -- Bất kỳ ai không phải là người được đào tạo đều không được phép thực hiện bất kỳ hoạt động bảo dưỡng hoặc sửa chữa nào liên quan đến việc tháo bỏ bất kỳ lớp vỏ bảo vệ nào chống lại sự tiếp xúc với năng lượng vi sóng.
15. Sản phẩm này là thiết bị ISM Nhóm 2 Loại B. Định nghĩa của Nhóm 2 bao gồm tất cả thiết bị ISM

(Công nghiệp, Khoa học và Y tế) trong đó năng lượng tần số vô tuyến được tạo ra và/hoặc sử dụng có chủ đích dưới dạng bức xạ điện từ để xử lý vật liệu và thiết bị xói mòn tia lửa. Đối với thiết bị Loại B là thiết bị phù hợp để sử dụng trong các cơ sở trong nước và trong các cơ sở được kết nối trực tiếp với mạng lưới cung cấp điện áp thấp cung cấp cho các tòa nhà được sử dụng cho mục đích trong nước.

16. Thiết bị này không dành cho những người (bao gồm cả trẻ em) có khả năng thể chất, giác quan hoặc tinh thần hạn chế, hoặc thiếu kinh nghiệm và kiến thức, trừ khi họ được người chịu trách nhiệm về sự an toàn của họ giám sát hoặc hướng dẫn sử dụng thiết bị.
17. Trẻ em cần được giám sát để đảm bảo chúng không đùa nghịch với thiết bị.
18. Lò vi sóng chỉ được sử dụng ở trạng thái độc lập.
19. **CẢNH BÁO !** -- Không lắp lò vi sóng trên bếp nấu hoặc các thiết bị tỏa nhiệt khác. Nếu lắp đặt như vậy, lò có thể bị hư hỏng và bảo hành sẽ không còn hiệu lực.
20. Không được đặt lò vi sóng trong tủ.
21. **CẢNH BÁO!** - Thiết bị và các bộ phận có thể chạm vào sẽ nóng lên trong quá trình sử dụng.
22. **CẢNH BÁO !** -- Các bộ phận dễ tiếp cận có thể nóng lên trong quá trình sử dụng. Nên giữ trẻ nhỏ tránh xa.
23. Trong quá trình sử dụng, thiết bị trở nên nóng. Cần cẩn thận để tránh chạm vào các bộ phận làm nóng bên trong lò, đối với bếp nấu và lò vi sóng.
24. Nhiệt độ của các bề mặt chạm vào có thể cao khi thiết bị đang hoạt động.
25. Thiết bị phải được đặt dựa vào tường.
26. Trẻ em hoặc những người có năng lực thể chất, giác quan hoặc tinh thần hạn chế, hoặc thiếu kinh nghiệm và kiến thức không được sử dụng thiết bị, trừ khi họ được giám sát hoặc hướng dẫn.
27. **CẢNH BÁO !** -- Nếu cửa hoặc gioăng cửa bị hỏng, không được vận hành lò cho đến khi được người có chuyên môn sửa chữa.
28. Các thiết bị này không được thiết kế để vận hành bằng bộ hẹn giờ bên ngoài hoặc hệ thống điều khiển từ xa riêng biệt.
29. Lò vi sóng chỉ dùng trong gia đình, không dùng cho mục đích thương mại.
30. Không bao giờ tháo giá đỡ khoảng cách ở phía sau hoặc hai bên vì chúng đảm bảo khoảng cách tối thiểu với tường để không khí lưu thông.
31. Vui lòng cố định đĩa xoay trước khi di chuyển thiết bị để tránh hư hỏng.
32. **THẬN TRỌNG!** -- Việc sửa chữa hoặc bảo trì thiết bị bởi người không chuyên là nguy hiểm, vì trong những trường hợp này, vỏ bảo vệ chống bức xạ vi sóng phải được tháo ra. Điều này cũng áp dụng khi thay dây nguồn hoặc đèn chiếu sáng. Trong các trường hợp này, hãy gửi thiết bị đến trung tâm bảo hành của chúng tôi.
33. Lò vi sóng chỉ dùng để rã đông, nấu và hấp thực phẩm.
34. Sử dụng găng tay khi lấy bất kỳ thực phẩm nóng nào.
35. Thận trọng! Hơi nước sẽ thoát ra khi mở nắp hoặc gói giấy bạc.
36. Thiết bị này có thể được sử dụng bởi trẻ em từ 8 tuổi trở lên và những người có khả năng thể chất, giác quan hoặc tinh thần bị suy giảm, hoặc thiếu kinh nghiệm và kiến thức, nếu họ được hướng dẫn hoặc giám sát về cách sử dụng thiết bị an toàn và hiểu rõ các nguy hiểm liên quan. Trẻ em không được chơi với thiết bị. Việc vệ sinh và bảo trì do người dùng thực hiện không được giao cho trẻ em, trừ khi trẻ từ 8 tuổi trở lên và có sự giám sát.
37. Nếu có khói, hãy tắt hoặc rút phích cắm của thiết bị và đóng chặt cửa để dập tắt ngọn lửa.

## HƯỚNG DẪN LẮP ĐẶT

1. Đảm bảo rằng tất cả các vật liệu đóng gói đã được loại bỏ khỏi bên trong cửa.
2. **CẢNH BÁO:** Kiểm tra xem lò vi sóng có bất kỳ hư hỏng nào không, chẳng hạn như cửa bị lệch hoặc cong, gioăng cửa và bề mặt gioăng bị hỏng, bản lề và chốt cửa bị hỏng hoặc lỏng và vết lõm bên trong khoang hoặc trên cửa. Nếu có bất kỳ hư hỏng nào, không được vận hành lò vi sóng và liên hệ với nhân viên bảo dưỡng có trình độ.
3. Lò vi sóng này phải được đặt trên bề mặt phẳng, ổn định để chịu được trọng lượng của lò và thức ăn nặng nhất có thể được nấu trong lò.
4. Không đặt lò ở nơi có nhiệt độ cao, độ ẩm cao hoặc gần các vật liệu dễ cháy.
5. Để vận hành đúng, lò phải có đủ luồng không khí. Chừa khoảng cách 20cm phía trên lò, 10cm ở phía sau và 5cm ở cả hai bên. Không che hoặc chặn bất kỳ lỗ hở nào trên thiết bị. Không tháo đế lò.
6. Không vận hành lò vi sóng khi khay thủy tinh, giá đỡ con lăn và trục chưa ở đúng vị trí.
7. Đảm bảo dây nguồn không bị hỏng và không chạy dưới lò vi sóng hoặc trên bất kỳ bề mặt nóng hoặc sắc nhọn nào.
8. Ổ cắm phải dễ tiếp cận để có thể dễ dàng rút phích cắm trong trường hợp khẩn cấp.
9. Không sử dụng lò vi sóng ngoài trời.

## NHIỀU TẦN SỐ VÔ TUYẾN

Việc sử dụng lò vi sóng có thể gây nhiễu sóng cho radio, TV hoặc các thiết bị tương tự. Khi có hiện tượng nhiễu, có thể giảm thiểu hoặc loại bỏ bằng cách thực hiện các biện pháp sau:

1. Vệ sinh sạch cửa lò và bề mặt gioăng của lò.
2. Đổi hướng ăng-ten thu sóng của radio hoặc tivi.
3. Di chuyển lò vi sóng về phía đầu thu.
4. Di chuyển lò vi sóng ra xa đầu thu.
5. Cắm lò vi sóng vào ổ cắm khác để lò vi sóng và đầu thu nằm trên các mạch nhánh khác nhau.

## NGUYÊN LÝ NẤU ĂN BẰNG VI SÓNG

1. Sắp xếp thực phẩm cẩn thận. Đặt phần thực phẩm dày nhất ra phía ngoài đĩa.
2. Theo dõi thời gian nấu. Nấu trong thời gian ngắn nhất được chỉ định và thêm thời gian nếu cần. Thực phẩm nấu quá chín có thể bốc khói hoặc bắt lửa.
3. Đậy nắp thực phẩm khi nấu. Đậy nắp giúp thực phẩm không bị bắn tung tóe và giúp thực phẩm chín đều.
4. Lật thức ăn một lần trong khi nấu bằng lò vi sóng để tăng tốc độ nấu các loại thực phẩm như gà và bánh mì kẹp thịt. Các món lớn như thịt quay phải được lật ít nhất một lần.
5. Sắp xếp lại thực phẩm, chẳng hạn như thịt viên, vào giữa quá trình nấu, cả từ trên xuống dưới và từ trung tâm đĩa ra ngoài.

## HƯỚNG DẪN NỔ ĐẤT

Thiết bị này phải được nổ đất. Lò vi sóng này được trang bị dây có dây nổ đất với phích cắm nổ đất. Phải cắm vào ổ cắm trên tường được lắp đặt và nổ đất đúng cách. Trong trường hợp xảy ra đoản mạch điện, nổ đất sẽ giảm nguy cơ điện giật bằng cách cung cấp dây thoát cho dòng điện. Nên cung cấp một mạch riêng chỉ phục vụ cho lò vi sóng. Sử dụng điện áp cao rất nguy hiểm và có thể gây ra hỏa hoạn hoặc tai nạn khác khiến lò vi sóng bị hỏng.

**CẢNH BÁO** Việc sử dụng phích cắm nổ đất không đúng cách có thể gây ra nguy cơ điện giật.

### Ghi chú:

1. Nếu bạn có bất kỳ thắc mắc nào về hướng dẫn nổ đất hoặc điện, hãy tham khảo ý kiến của thợ điện hoặc nhân viên dịch vụ có trình độ.
2. Nhà sản xuất và đại lý không chịu trách nhiệm về bất kỳ thiệt hại nào đối với lò vi sóng hoặc thương tích cá nhân do không tuân thủ quy trình kết nối điện.

Các dây trong cáp nguồn này được mã hóa màu theo quy ước sau:

**Xanh lá cây và Vàng = DÂY TIẾP ĐẤT**

**Xanh lam = DÂY TRUNG TÍNH**

**Nâu = DÂY NÓNG**

## TRƯỚC KHI BẠN GỌI DỊCH VỤ SỬA CHỮA

Nếu lò không hoạt động:

1. Kiểm tra để đảm bảo lò vi sóng được cắm chặt. Nếu chưa, hãy rút phích cắm ra khỏi ổ cắm, đợi 10 giây và cắm lại thật chặt.
2. Kiểm tra cầu chì mạch bị đứt hoặc cầu dao chính bị ngắt. Nếu chúng hoạt động bình thường, hãy thử ổ cắm bằng một thiết bị khác.
3. Kiểm tra để đảm bảo bảng điều khiển được lắp trình đúng và bộ hẹn giờ đã được cài đặt.
4. Kiểm tra để đảm bảo rằng cửa đã được đóng chặt và kích hoạt hệ thống khóa an toàn của cửa. Nếu không, năng lượng vi sóng sẽ không được dẫn vào lò.

NẾU KHÔNG CÓ BIỆN PHÁP NÀO TRÊN CÓ THỂ GIẢI QUYẾT TÌNH TRẠNG NÀY, HÃY LIÊN HỆ VỚI KỸ THUẬT VIÊN CÓ TRÌNH ĐỘ. KHÔNG CỐ TỰ ĐIỀU CHỈNH HOẶC SỬA CHỮA LÒ VI SÓNG.

## HƯỚNG DẪN SỬ DỤNG DỤNG CỤ NẤU

1. Vi sóng không thể xuyên qua kim loại. Chỉ sử dụng các dụng cụ phù hợp với lò vi sóng. Không được sử dụng hộp kim loại để chứa thực phẩm và đồ uống trong quá trình nấu bằng lò vi sóng. Yêu cầu này không áp dụng nếu nhà sản xuất quy định kích thước và hình dạng của hộp kim loại phù hợp để nấu trong lò vi sóng.
2. Vi sóng không thể xuyên qua kim loại, do đó không nên sử dụng đồ dùng bằng kim loại hoặc bát đĩa có viền kim loại.
3. Không sử dụng các sản phẩm giấy tái chế khi nấu bằng lò vi sóng vì chúng có thể chứa các mảnh kim loại nhỏ có thể gây ra tia lửa và/hoặc hỏa hoạn.
4. Nên dùng đĩa tròn/hình bầu dục thay vì đĩa vuông/hình chữ nhật vì thức ăn ở góc thường bị chín quá.
5. Có thể sử dụng các dải giấy nhôm hẹp để ngăn chặn việc nấu quá chín ở các khu vực tiếp xúc.

Tuy nhiên, hãy cẩn thận không sử dụng quá nhiều và luôn giữ khoảng cách ít nhất 1 inch (2,54 cm) giữa giấy nhôm và khoang lò.

Danh sách dưới đây là hướng dẫn chung giúp bạn chọn đúng dụng cụ nấu.


| <b>DỤNG CỤ NẤU</b>              | <b>LÒ VI SÓNG</b> |
|---------------------------------|-------------------|
| Kính chịu nhiệt                 | Có                |
| Kính không chịu nhiệt           | Không             |
| Gốm chịu nhiệt                  | Có                |
| Đĩa nhựa an toàn cho lò vi sóng | Có                |
| Giấy nhà bếp                    | Có                |
| Khay kim loại                   | Không             |
| Kệ kim loại                     | Không             |
| Giấy bạc và hộp đựng giấy bạc   | Không             |

## THÔNG SỐ KỸ THUẬT


|                             |                                             |
|-----------------------------|---------------------------------------------|
| Nguồn điện sử dụng          | 230V /50Hz, 1200W (Lò vi sóng)              |
| Công suất định mức          | 7 00W                                       |
| Tần số khi hoạt động        | 2450MHz                                     |
| Kích thước bên ngoài của lò | 2 62 mm (C) × 4 52 mm (R) × 352 mm (S)      |
| Kích thước khoang lò        | 178 mm (Cao) × 315 mm (Rộng) × 296 mm (Sâu) |
| Dung tích lò                | Nhỏ gọn 20 lít                              |
| Trọng lượng máy             | Xấp xỉ 10,8 kg                              |

## TÊN CÁC BỘ PHẬN

1. Hệ thống khóa an toàn cửa
2. Cửa sổ lò vi sóng
3. Vòng con lăn
4. Trục
5. Bảng điều khiển
6. Tấm hướng sóng  
(Vui lòng không tháo tấm hướng sóng che ống dẫn sóng)
7. Khay thủy tinh

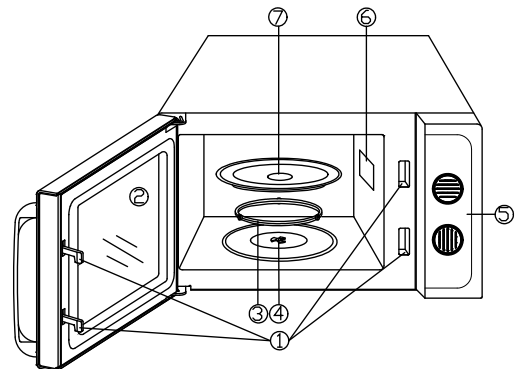

# BẢNG ĐIỀU KHIỂN

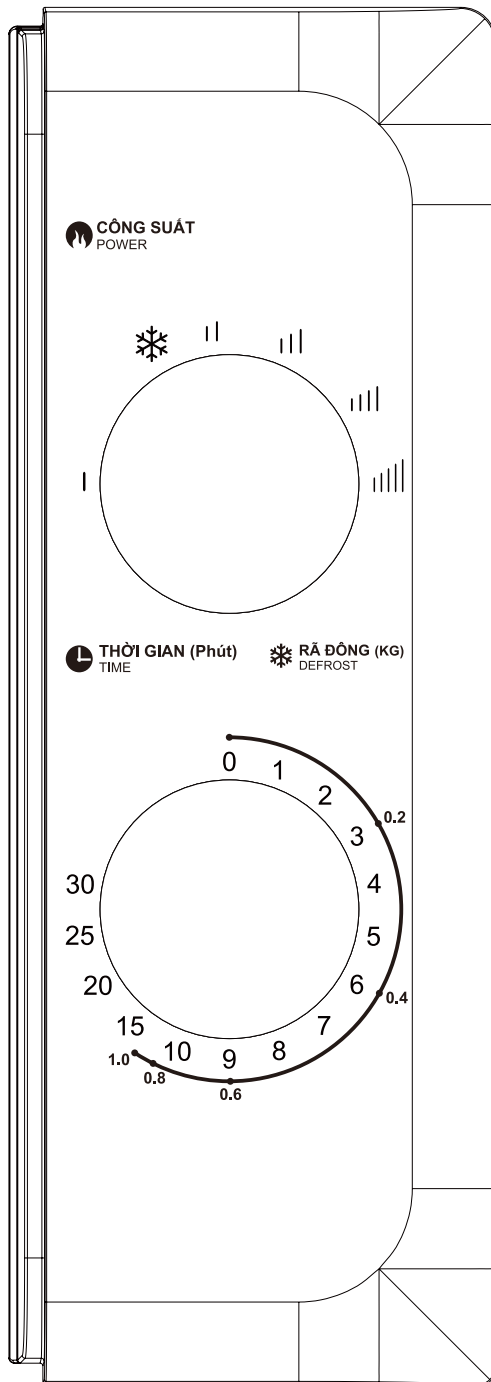

Bảng điều khiển bao gồm hai chức năng. Một là nút hẹn giờ và một là nút điều chỉnh công suất.

## ***NÚM CHỌN CÔNG SUẤT/ HÀNH ĐỘNG***

Dùng để lựa chọn mức công suất nấu. Đây là bước đầu tiên để bắt đầu quá trình nấu ăn.

## ***NÚM HẸN GIỜ***

Cung cấp cài đặt thời gian trực quan chỉ bằng cách xoay ngón tay cái để chọn thời gian nấu mong muốn, tối đa 30 phút cho mỗi lần nấu.

## ***NẤU ĂN BẰNG LÒ VI SÓNG***

Đối với chế độ nấu thuần vi sóng, có sáu mức công suất để lựa chọn sao cho phù hợp nhất với nhu cầu sử dụng. Công suất sẽ tăng dần khi vặn nút theo chiều kim đồng hồ. Các mức công suất được phân loại như sau:

|   | Công suất đầu ra | Sự miêu tả      |
|---|------------------|-----------------|
| 1 | 100%             | CAO             |
| 2 | 88%              | TRUNG BÌNH CAO  |
| 3 | 73%              | TRUNG BÌNH      |
| 4 | 52%              | TRUNG BÌNH THẤP |
| 5 | 42%              | RÃ ĐÔNG         |
| 6 | 20%              | THẤP            |

# HOẠT ĐỘNG

Để bắt đầu quá trình nấu ăn,

1. Đặt thực phẩm vào lò và đóng cửa lại.
2. Xoay núm Chọn Công Suất để chọn mức công suất phù hợp.
3. Dùng núm Hẹn Giờ để cài đặt thời gian nấu.

## GHI CHÚ:

Lò vi sóng sẽ bắt đầu hoạt động ngay khi núm hẹn giờ được vặn.


Khi chọn thời gian nấu dưới 2 phút, hãy vặn núm hẹn giờ qua mức 2 phút rồi xoay ngược lại thời gian mong muốn..

**THẬN TRỌNG** : LUÔN LUÔN XOAY NÚM HẸN GIỜ VỀ VỊ TRÍ "0" nếu lấy thực phẩm ra khỏi lò trước khi thời gian nấu kết thúc hoặc khi không sử dụng lò. Để dừng lò trong quá trình nấu, hãy nhấn nút mở cửa hoặc kéo tay cầm để mở cửa lò.

# VỆ SINH VÀ BẢO DƯỠNG

1. Tắt lò và rút phích cắm ra khỏi ổ điện trước khi vệ sinh.
2. Giữ sạch bên trong lò. Khi thức ăn bắn ra hoặc chất lỏng đổ dính vào thành lò, hãy lau bằng khăn ẩm. Có thể sử dụng chất tẩy rửa nhẹ nếu lò quá bẩn. Tránh dùng bình xịt hoặc chất tẩy rửa mạnh vì chúng có thể làm ố, xước hoặc làm mờ bề mặt cửa lò.
3. Bề mặt bên ngoài cần được lau bằng khăn ẩm. Để tránh làm hỏng các bộ phận bên trong lò, không để nước thấm vào các khe thông gió.
4. Thường xuyên lau cửa lò, cửa sổ hai mặt, gioăng cửa và các khu vực lân cận bằng khăn ẩm để loại bỏ vết bẩn. Không sử dụng chất tẩy rửa có tính mài mòn.
5. Không sử dụng máy làm sạch bằng hơi nước.
6. Không để bảng điều khiển bị ướt. Chỉ lau bằng khăn mềm, ẩm. Khi vệ sinh bảng điều khiển, hãy để cửa lò mở để tránh lò hoạt động ngoài ý muốn.
7. Nếu hơi nước tích tụ bên trong hoặc xung quanh cửa lò, hãy lau bằng khăn mềm. Điều này có thể xảy ra khi lò vi sóng hoạt động trong điều kiện độ ẩm cao và là hiện tượng bình thường.
8. Định kỳ tháo khay thủy tinh để vệ sinh. Rửa khay bằng nước ấm có pha xà phòng hoặc đặt vào máy rửa chén.
9. Vòng xoay và đáy lò nên được vệ sinh thường xuyên để tránh gây tiếng ồn quá mức. Chỉ cần lau bề mặt đáy lò bằng chất tẩy rửa nhẹ. Vòng xoay có thể rửa bằng nước ấm có pha xà phòng hoặc đặt vào máy rửa chén. Khi tháo vòng xoay ra khỏi đáy lò để vệ sinh, hãy đảm bảo đặt lại đúng vị trí.
10. Khử mùi lò bằng cách cho một cốc nước cùng với vỏ và nước cốt của một quả chanh vào một tô sâu lòng chịu nhiệt, sau đó quay lò trong 5 phút. Lau sạch và lau khô bằng khăn mềm.
11. Khi cần thay đèn lò, vui lòng liên hệ đại lý để được thay thế.
12. Lò cần được vệ sinh thường xuyên và loại bỏ các cặn thực phẩm. Nếu không vệ sinh lò đúng cách, bề mặt có thể bị hư hỏng, ảnh hưởng đến tuổi thọ của thiết bị và có thể gây ra cháy nổ và nguy hiểm.
13. Không vứt bỏ thiết bị này vào thùng rác sinh hoạt; hãy xử lý tại các trung tâm xử lý rác thải theo quy định của địa phương.

# Microwave Oven Instructions

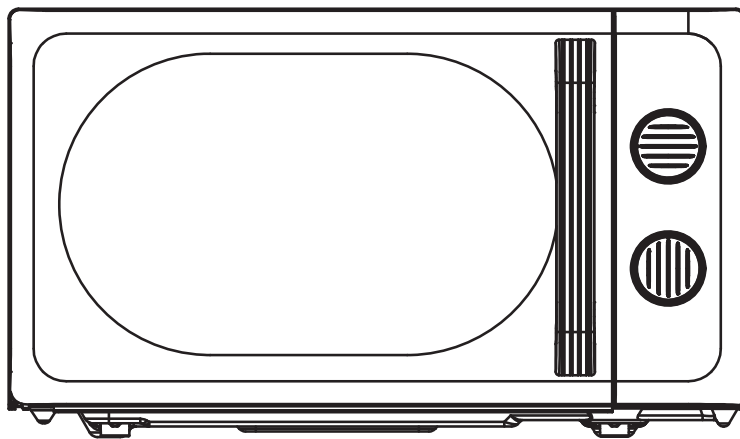

**Model : R-2041ER-CW  
R-2042ER-RB**

**700W**

Please read these instructions carefully before installing and operating the oven.

# **PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY**

1. Do not attempt to operate this oven with the door open since open door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
2. Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
3. Do not operate the oven if it is damaged. It is particularly important that the oven door close properly and that there is no damage to the
  - a. Door (bent),
  - b. Hinges and latches (broken or loosened),
  - c. Door seals and sealing surfaces.
4. The oven should not be adjusted or repaired by anyone except properly qualified service personnel.

## **CONTENT**

|                                                                                   |          |
|-----------------------------------------------------------------------------------|----------|
| <b>PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY .....</b> | <b>1</b> |
| <b>IMPORTANT SAFETY INSTRUCTIONS.....</b>                                         | <b>2</b> |
| <b>INSTALLATION GUIDE .....</b>                                                   | <b>4</b> |
| <b>RADIO INTERFERENCE .....</b>                                                   | <b>4</b> |
| <b>MICROWAVE COOKING PRINCIPLES .....</b>                                         | <b>4</b> |
| <b>GROUNDING INSTRUCTIONS.....</b>                                                | <b>5</b> |
| <b>BEFORE YOU CALL FOR SERVICE .....</b>                                          | <b>5</b> |
| <b>UTENSILS GUIDE.....</b>                                                        | <b>5</b> |
| <b>SPECIFICATIONS .....</b>                                                       | <b>6</b> |
| <b>PART NAMES.....</b>                                                            | <b>6</b> |
| <b>CONTROL PANEL .....</b>                                                        | <b>7</b> |
| POWER/ACTION SELECTOR .....                                                       | 7        |
| TIMER KNOB .....                                                                  | 7        |
| MICROWAVE COOKING .....                                                           | 7        |
| <b>OPERATION .....</b>                                                            | <b>8</b> |
| <b>CLEANING AND CARE .....</b>                                                    | <b>8</b> |

# IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliance basic safety precautions should be followed, including the following:

**WARNING!**--To reduce the risk of burns, electric shock, fire, injury to persons or exposure to excessive microwave energy:

1. Use this appliance only for its intended use as described in the manual. Do not use corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat, cook or dry food. It is not designed for industrial or laboratory use.
2. Do not operate the oven when empty.
3. Do not operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
4. **WARNING!**--Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
5. To reduce the risk of fire in the oven cavity:
  - When heating food in plastic or paper container, keep an eye on the oven due to the possibility of ignition.
  - Remove wire twist-ties from paper or plastic bags before placing bag in oven.
  - If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
  - Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils, or food in the cavity when not in use.
  - The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.
6. **WARNING!**--Liquid or other food must not be heated in sealed containers since they are liable to explode.
7. Microwave heating of beverages can result in delayed eruptive boiling, therefore care has to be taken when handle the container.
8. Do not fry food in the oven. Hot oil can damage oven parts and utensils and even result in skin burns.
9. Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode even after microwave heating has ended.
10. Pierce foods with heavy skins such as potatoes, whole squashes, apples and chestnuts before cooking.
11. The contents of feeding bottles and baby food jars should be stirred or shaken and the temperature should be checked before serving in order to avoid burns.
12. Cooking utensils may become hot because of heat transferred from the heated food. Potholders may be needed to handle the utensil.
13. Utensils should be checked to ensure that they are suitable for use in microwave oven.
14. **WARNING!**--It is hazardous for anyone other than a trained person to carry out any service or repair operation which involves the removal of any cover which gives protection against exposure to microwave energy.

15. This product is a Group 2 Class B ISM equipment. The definition of Group 2 which contains all ISM (Industrial, Scientific and Medical) equipment in which radio-frequency energy is intentionally generated and/or used in the form of electromagnetic radiation for the treatment of material, and spark erosion equipment. For Class B equipment is equipment suitable for use in domestic establishments and in establishments directly connected to a low voltage power supply network which supplies buildings used for domestic purpose.
16. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
17. Children should be supervised to ensure that they do not play with the appliance.
18. The microwave oven is only used in freestanding.
19. **WARNING!**--Do not install oven over a range cook top or other heat-producing appliance. if installed could be damaged and the warranty would be avoid .
20. The microwave oven must not be placed in the cabinet.
21. **WARNING!**--The appliance and its accessible parts become hot during use.
22. **WARNING!**--Accessible parts may become hot during use. Young children should be kept away.
23. During use the appliances becomes hot. Care should be taken to avoid touching heating elements inside the oven, for cooking ranged and ovens.
24. The temperature of accessible surfaces may be high when the appliance is operating.
25. The appliance shall be placed against a wall.
26. Appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
27. **WARNING!**--If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.
28. The appliances are not intended to be operated by means of an external timer or separate remote-control system.
29. The microwave oven is for household use only and not for commercial use.
30. Never remove the distance holder in the back or on the sides, as it ensures a minimum distance from the wall for air circulation.
31. Please secure the turntable before you move the appliance to avoid damages.
32. **CAUTION!**--It is dangerous to repair or maintain the appliance by no other than a specialist because under these circumstances the cover have to be removed which assures protection against microwave radiation. This applies to changing the power cord or the lighting as well. Send the appliance in these cases to our service centre.
33. The microwave oven is intended for defrosting, cooking and steaming of food only.
34. Use gloves if you remove any heated food.
35. Caution! Steam will escape, when opening lids or wrapping foil.
36. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised.
37. If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any

flames.

## INSTALLATION GUIDE

1. Make sure that all the packing materials are removed from the inside of the door.
2. **WARNING:** Check the oven for any damage, such as misaligned or bent door, damaged door seals and sealing surface, broken or loose door hinges and latches and dents inside the cavity or on the door. If there is any damage, do not operate the oven and contact qualified service personnel.
3. This microwave oven must be placed on a flat, stable surface to hold its weight and the heaviest food likely to be cooked in the oven.
4. Do not place the oven where heat, moisture, or high humidity are generated, or near combustible materials.
5. For correct operation, the oven must have sufficient airflow. Allow 20cm of space above the oven, 10cm at back and 5cm at both sides. Do not cover or block any openings on the appliance. Do not remove feet.
6. Do not operate the oven without glass tray, roller support, and shaft in their proper positions.
7. Make sure that the power supply cord is undamaged and does not run under the oven or over any hot or sharp surface.
8. The socket must be readily accessible so that it can be easily unplugged in an emergency.
9. Do not use the oven outdoors.

## RADIO INTERFERENCE

Operation of the microwave oven can cause interference to your radio, TV, or similar equipment. When there is interference, it may be reduced or eliminated by taking the following measures:

1. Clean door and sealing surface of the oven.
2. Reorient the receiving antenna of radio or television.
3. Relocate the microwave oven with respect to the receiver.
4. Move the microwave oven away from the receiver.
5. Plug the microwave oven into a different outlet so that microwave oven and receiver are on different branch circuits.

## MICROWAVE COOKING PRINCIPLES

1. Arrange food carefully. Place thickest areas towards outside of dish.
2. Watch cooking time. Cook for the shortest amount of time indicated and add more as needed. Food severely overcooked can smoke or ignite.
3. Cover foods while cooking. Covers prevent spattering and help foods to cook evenly.
4. Turn foods over once during microwave cooking to speed cooking of such foods as chicken and hamburgers. Large items like roasts must be turned over at least once.
5. Rearrange foods such as meatballs halfway through cooking both from top to bottom and from the center of the dish to the outside.

# GROUNDING INSTRUCTIONS

This appliance must be grounded. This oven is equipped with a cord having a grounding wire with a grounding plug. It must be plugged into a wall receptacle that is properly installed and grounded. In the event of an electrical short circuit, grounding reduces risk of electric shock by providing an escape wire for the electric current. It is recommended that a separate circuit serving only the oven be provided. Using a high voltage is dangerous and may result in a fire or other accident causing oven damage.

**WARNING** Improper use of the grounding plug can result in a risk of electric shock.

**Note:**

1. If you have any questions about the grounding or electrical instructions, consult a qualified electrician or service person.
2. Neither the manufacturer nor the dealer can accept any liability for damage to the oven or personal injury resulting from failure to observe the electrical connection procedures.

The wires in this cable main are colored in accordance with the following code:

**Green and Yellow = EARTH**

**Blue = NEUTRAL**

**Brown = LIVE**

# BEFORE YOU CALL FOR SERVICE

If the oven fails to operate:

1. Check to ensure that the oven is plugged in securely. If it is not, remove the plug from the outlet, wait 10 seconds, and plug it in again securely.
2. Check for a blown circuit fuse or a tripped main circuit breaker. If these seem to be operating properly, test the outlet with another appliance.
3. Check to ensure that the control panel is programmed correctly and the timer is set.
4. Check to ensure that the door is securely closed engaging the door safety lock system. Otherwise, the microwave energy will not flow into the oven.

IF NONE OF THE ABOVE RECTIFIES THE SITUATION, THEN CONTACT A QUALIFIED TECHNICIAN. DO NOT TRY TO ADJUST OR REPAIR THE OVEN YOURSELF.

# UTENSILS GUIDE

1. Microwave cannot penetrate metal. Only use utensils that are suitable for use in microwave ovens. Metallic containers for food and beverages are not allowed during microwave cooking. This requirement is not applicable if the manufacturer specifies size and shape of metallic containers suitable for microwave cooking.
2. Microwave cannot penetrate metal, so metal utensils or dishes with metallic trim should not be used.
3. Do not use recycled paper products when microwave cooking, as they may contain small metal fragments which may cause sparks and/or fires.
4. Round /oval dishes rather than square/oblong ones are recommend, as food in corners tends to overcook.
5. Narrow strips of aluminum foil may be used to prevent overcooking of exposed areas. But be

careful don't use too much and keep a distance of 1 inch (2.54cm) between foil and cavity.  
The list below is a general guide to help you select the correct utensils.


| COOKWARE                        | MICROWAVE |
|---------------------------------|-----------|
| Heat-Resistant Glass            | Yes       |
| Non Heat-Resistant Glass        | No        |
| Heat-Resistant Ceramics         | Yes       |
| Microwave-Safe Plastic Dish     | Yes       |
| Kitchen Paper                   | Yes       |
| Metal Tray                      | No        |
| Metal Rack                      | No        |
| Aluminum Foil & Foil Containers | No        |

## SPECIFICATIONS


|                               |                              |
|-------------------------------|------------------------------|
| Power Consumption:            | 230V/50Hz, 1200W (Microwave) |
| Rated microwave power output: | 700W                         |
| Operation Frequency:          | 2450MHz                      |
| Outside Dimensions:           | 262mm(H)×452mm(W)×352mm(D)   |
| Oven Cavity Dimensions:       | 178mm(H)×315mm(W)×296mm(D)   |
| Oven Capacity:                | Compact 20Litres             |
| Net Weight:                   | Approx. 10.8kg               |

## PART NAMES

1. Door Safety Lock System
2. Oven Window
3. Roller Ring
4. Shaft
5. Control Panel
6. Wave Guide  
(Please do not remove the mica plate covering the wave guide)
7. Glass Tray

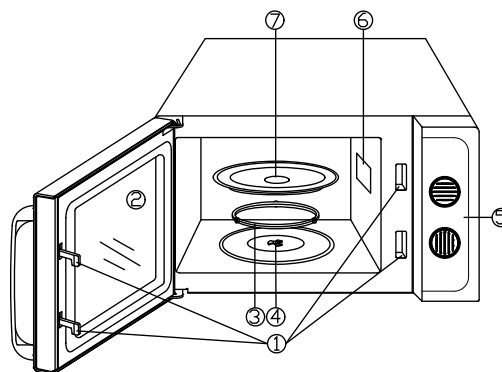

# CONTROL PANEL

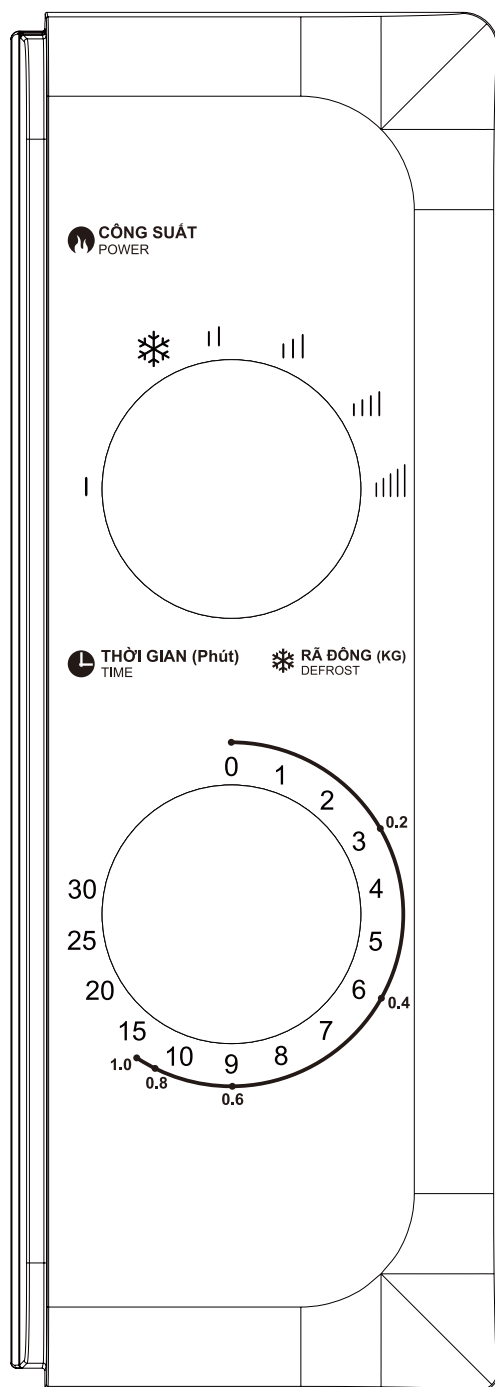

The control panel consists of two function operators. One is a timer knob, and another a power knob.

## ***POWER/ACTION SELECTOR***

You use this operator knob to choose a cooking power level. It is the first step to start a cooking session.

## ***TIMER KNOB***

Offer visual timing settings at easy turn of your thumb to select a desired cooking time up to 30 minutes per cooking session.

## ***MICROWAVE COOKING***

For pure microwave cooking, there are six power levels from which to choose one as best fit to do the job at hand. Power level increases with the knob turning clockwise.

The power levels can be classified as the following:

|   | Power Output | Description |
|---|--------------|-------------|
| 1 | 100%         | HIGH        |
| 2 | 88%          | M.HIGH      |
| 3 | 73%          | MID         |
| 4 | 52%          | M.LOW       |
| 5 | 42%          | DEFROST     |
| 6 | 20%          | LOW         |

# OPERATION

To start a cooking session,

1. Place food in oven and close the door.
2. Turn Power Selector to select a power level.
3. Use Timer knob to set a cooking time

**NOTE:**

As soon as the timer is turned, oven starts cooking.

When selecting time for less than 2 minutes, turn timer past 2 minutes and then return to the correct time.

**CAUTION:** ALWAYS RETURN TIMER BACK TO ZERO POSITION if food is removed from oven before the set cooking time is complete or when oven is not in use. To stop oven during cooking process, push the door release button or open the door by the handle.

# CLEANING AND CARE

1. Turn off the oven and remove the power plug from the wall socket before cleaning.
2. Keep the inside of the oven clean. When food splatters or spilled liquids adhere to oven walls, wipe with a damp cloth. Mild detergent may be used if the oven gets very dirty. Avoid the use of spray and other harsh cleaners as they may stain, streak or dull the door surface.
3. The outside surfaces should be cleaned with a damp cloth. To prevent damage to the operating parts inside the oven, water should not be allowed to seep into the ventilation openings.
4. Wipe the door and window on both sides, the door seals and adjacent parts frequently with a damp cloth to remove any spills or splatters. Do not use abrasive cleaner.
5. A steam cleaner is not be used.
6. Do not allow the control panel to become wet. Clean with a soft, damp cloth. When cleaning the control panel, leave oven door open to prevent oven from accidentally turning on.
7. If steam accumulates inside or around the outside of the oven door, wipe with a soft cloth. This may occur when the microwave oven is operated under high humidity condition. And it is normal.
8. It is occasionally necessary to remove the glass tray for cleaning. Wash the tray in warm sudsy water or in a dishwasher.
9. The roller ring and oven floor should be cleaned regularly to avoid excessive noise. Simply wipe the bottom surface of the oven with mild detergent. The roller ring may be washed in mild sudsy water or dishwasher. When removing the roller ring from cavity floor for cleaning, be sure to replace in the proper position.
10. Remove odors from your oven by combining a cup of water with the juice and skin of one lemon in a deep microwaveable bowl, microwave for 5 minutes. Wipe thoroughly and dry with a soft cloth.
11. When it becomes necessary to replace the oven light, please consult a dealer to have it replaced.
12. The oven should be cleaned regularly and any food deposits removed. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous.
13. Please do not dispose this appliance into the domestic rubbish bin; it should be disposed to the particular disposal center provided by the municipalities.



**SHARP**