

# **SHARP**

**MÁY VẮT CAM**

**Citrus Juicer**

**Model No.: EJ-J415-WH**



**HƯỚNG DẪN SỬ DỤNG**  
**Instruction Manual**  
**220-240V~50-60Hz,40W**

# HƯỚNG DẪN SỬ DỤNG

## Máy vắt cam

EJ-J415-WH

Khách hàng thân mến!

Cảm ơn các bạn đã mua sản phẩm của chúng tôi. Đây là loại sản phẩm vắt nước trái cây có mùi được thiết kế bắt mắt và được làm từ các thành phần chất lượng cao. Giấy chứng nhận với GS, CE. Chúng tôi hy vọng bộ sản phẩm này sẽ hỗ trợ bạn và tạo thuận lợi trong việc sử dụng


## Hướng dẫn quan trọng

Khi sử dụng thiết bị điện, để giảm nguy cơ hỏa hoạn, điện giật hoặc gây thương tích cho người sử dụng. Các biện pháp phòng ngừa và an toàn cơ bản cần được tuân thủ, bao gồm những điều sau đây: Vui lòng chú ý các điểm bên dưới

- Luôn ngắt kết nối thiết bị khỏi nguồn cung cấp nếu thiết bị không được sử dụng và trước khi lắp ráp cũng như tháo rời hoặc vệ sinh.
- Thiết bị này có thể được sử dụng cho trẻ em từ 8 tuổi trở lên nếu chúng được giám sát hoặc hướng dẫn liên quan đến việc sử dụng thiết bị một cách an toàn và chúng phải hiểu các mối nguy hiểm liên quan.
- Việc vệ sinh và bảo trì người dùng sẽ không được thực hiện bởi trẻ em trừ khi chúng từ 8 tuổi trở lên và được giám sát. Giữ thiết bị và dây của nó xa tầm tay trẻ em dưới 8 tuổi.
- Thiết bị có thể được sử dụng bởi người có khả năng về thể chất, giác quan hoặc tâm thần hoặc thiếu kinh nghiệm và kiến thức NẾU họ đã được giám sát hoặc hướng dẫn sử dụng thiết bị theo một cách an toàn và nếu họ hiểu tác hại nguy hiểm.
- Trẻ em không được chơi với thiết bị.
- Đọc kỹ các nội dung hướng dẫn cẩn thận, ngay cả khi bạn đã quen thuộc với thiết bị.
- Nếu dây nguồn bị hỏng, phải được thay thế bằng dây trung tâm dịch vụ được SHARP uỷ quyền, hoặc những người có trình độ tương tự để tránh nguy hiểm.
- Tắt thiết bị trước khi thay đổi phụ kiện hoặc tiếp cận các bộ phận đang sử dụng.
- Sử dụng nguồn điện cho thiết bị phải đảm bảo đúng thông số kỹ thuật.
- Kiểm tra công suất đầu ra của thiết bị và sử dụng thiết bị riêng biệt với các thiết bị khác
- Đặt sản phẩm nơi khô ráo và trên bề mặt phẳng. Dùng vải khô khi vệ sinh thân máy.
- Thiết bị phù hợp với các loại trái cây mềm, như cam, v.v. Và không thể đáp ứng các loại trái cây cứng để tránh bị hỏng.
- Tắt nguồn điện cho các vấn đề như sau:
  - a. Lưỡi dao làm việc không đúng
  - b. Ấm thanh lạ khi sử dụng
  - c. Vệ sinh
  - d. Sử dụng xong

- Tránh xa tầm tay trẻ em
- Dung tích của sản phẩm không được vượt quá mức đo này khi hoạt động
- Sau khi sử dụng rút phích cắm ra khỏi ổ cắm. (Khi rút phích cắm, luôn luôn nắm chặt phích cắm và rút phích cắm ra khỏi ổ cắm)
- Thiết bị này được thiết kế chỉ để sử dụng trong hộ gia đình

## CẤU TẠO SẢN PHẨM

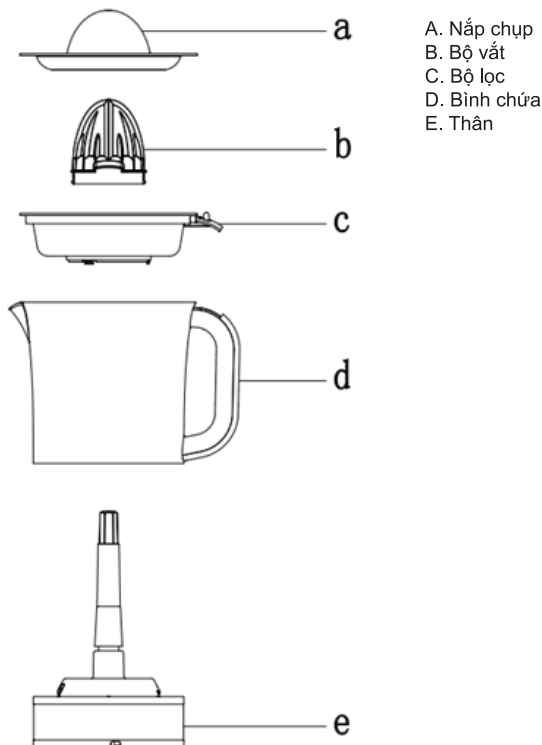

## PHƯƠNG PHÁP SỬ DỤNG

- Kéo dây nguồn từ dưới đáy. Bật nguồn và tháo nắp chụp và thiết bị đang ở chế độ chờ
- Cắt trái cây sau khi được làm sạch và đặt lên đỉnh của bộ vắt, dùng tay ấn mạnh trái cây và làm cho bộ vắt quay
- Một tay cầm tay cầm bình chứa nước trái cây, tay kia cố định xoay trên đỉnh bộ vắt cho nước trái cây vào bình. Xoay bình chứa đúng 30 độ và nhấc bình chứa ra khỏi thân, đổ nước trái cây vào cốc. Làm tiếp tục, và phải làm ngược so với các bước ở trên

- Một tay cố định bình chứa, tay còn lại cầm chắc bộ lọc, làm cho 2 bộ phận đó rời nhau và xoay bộ lọc để gom lại cận nước ép, khi bạn sử dụng máy móc này; Làm tiếp tục, phải đặt bộ lọc vào bình chứa
- Thiết bị này có thể điều chỉnh bộ lọc di chuyển theo mức độ đường gân trái cây, vắt lần thứ 5 là nhiều và vắt 1 lần là ít. Lần vắt đầu tiên nước trái cây thường là tinh khiết.
- Thiết bị này có hai đầu chiết xuất, nếu bạn chiết xuất quả lớn có thể sử dụng nắp chiết
- Không nhúng thiết bị vào nước
- Rút phích cắm của thiết bị trước khi thay đổi phụ kiện hoặc tiếp cận các bộ phận đang sử dụng.

## VỆ SINH VÀ BẢO QUẢN

- Khi bạn vệ sinh, vui lòng kéo dây trước, lấy bộ lọc ra, xoay cốc đúng hướng, kéo trục truyền và làm sạch từng bộ phận bằng nước, khi các bộ phận khô, lắp lại bằng cách làm ngược với cách tháo và rửa sạch
- Đậy nắp cốc và bảo quản trong hộp sau khi vệ sinh
- Để tránh nguy cơ bị điện giật, chập điện và cháy, không làm sạch chân đế hoặc dây nguồn bằng nước và không nhúng vào nước
- Tất cả các bộ phận phụ kiện tháo rời (trừ đế - bộ phận motor có kèm dây điện) đều có thể vệ sinh bằng máy rửa chén
- Khi rửa các bộ phận phụ kiện với nước nóng thì nhiệt độ không vượt quá 70°C
- Không sử dụng bất kỳ chất tẩy rửa làm mòn hoặc mài mòn

## THÔNG TIN BẢO HÀNH

Bảo hành theo hãng SHARP là 12 tháng bắt đầu từ ngày mua và không quá 18 tháng từ ngày sản xuất. Bảo hành chỉ bao gồm các bộ phận bị thiếu hoặc hư hỏng trong quá trình sản xuất.

Việc sửa chữa theo bảo hành chỉ có thể được thực hiện bởi một trung tâm dịch vụ ủy quyền của SHARP. Khi đưa ra yêu cầu theo bảo hành, phải có phiếu bảo hành kèm theo sản phẩm.

Bảo hành sẽ không áp dụng trong các trường hợp:

- Hao mòn thông thường
- Sử dụng không chính xác, ví dụ: quá tải thiết bị, sử dụng các phụ kiện không được phê duyệt
- Sử dụng tác động bên ngoài, thiệt hại do ảnh hưởng bên ngoài
- Hư hỏng do không tuân thủ hướng dẫn sử dụng, ví dụ: kết nối với nguồn cung cấp chính không phù hợp hoặc không tuân thủ các hướng dẫn cài đặt
- Thiết bị tháo dỡ một phần hoặc hoàn toàn

## XỬ LÝ SẢN PHẨM



Biểu tượng này cho thấy rằng sản phẩm này không nên được xử lý với chất thải gia đình khác trên toàn EU. Để ngăn chặn tác hại đối với môi trường hoặc sức khỏe con người từ việc xử lý chất thải không được kiểm soát, hãy tái chế nó một cách có trách nhiệm để thúc đẩy việc tái sử dụng bền vững các nguồn nguyên liệu. Để trả lại thiết bị đã sử dụng của bạn, vui lòng sử dụng hệ thống trả lại và thu tiền hoặc liên hệ với nhà bán lẻ nơi sản phẩm được mua. Họ có thể lấy sản phẩm này để tái chế an toàn môi trường.

## THÔNG SỐ KỸ THUẬT

Tên sản phẩm: EJ-J415-WH  
Điện áp: 220-240V/ 50Hz-60Hz  
Công suất: 40W  
Dung tích: 1.5L

Dear Customer!

Thanks for buy our product. This kind of juicer is excellent in design and made out of high qualitative components. Certificate with **GS** , **CE**. We hope this set can take with you be well and convenience.

## Important Instruction


When using electrical appliances, In order to reduce the risk of fire , electric shock, or injury to persons ,Basic safety precautions should also be followed , including the following: Please kindly pay your attention to below points:

- **Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.**
- **This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.**
- **Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.**
- **Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.**
- **Children shall not play with the appliance.**
- **Read all instructions carefully, even if you are familiar with the appliance.**
- **If the supply cord is damaged, it must be replaced by manufacture .its service agent or similarly qualified persons in order to avoid hazard.**
- **Switch off the appliance before changing accessories or approaching parts, which move in use.**
- **The electric power supply should come from a properly wired outlet.**
- **Check the capacity of the out and use the appliance separately from other equipment. Always ensure the voltage to be used corresponds to the voltage stated on the unit.**
- **Put the electric products in dry and stable flat. Using dried cloth when cleaning the machinery body.**
- **The appliance is suitable to soft fruits, such as orange etc. And can t meet the hard fruits so as to avoid being broken because of the over.**
- **Shut off the electric power for the following happenings:**
  - a. The turning blades working is not correct.
  - b. The uncommon voice when using.
  - c. Cleaning.
  - d. Finish using
- **Keep it away from the children and avoid accident**
- **This appliance rate capacity , do not excess this scale on working**

- After use unplug from the outlet .(when unplug, always grasp the plug And unplug it from the outlet)
- This appliance is designed only for household use

## Structure Illustration

A、cup cover      B. extractor      C. Fix fliter      D. Cup      E. Body

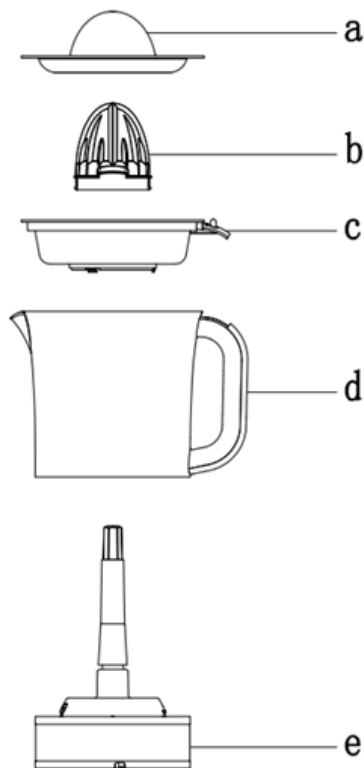

## Using Method

- Put out the power wire from the bottom fixed pot. and make power be on, put off the lid, then the machine is on waiting
- Separate the cleaned fruits from the middle and put them on the top of turning blade, press the fruit heavily with hands and make the turning blade turn.
- One hand take the handle of juice cup, the other fix the machinery when put the juice into the cup. Turn the juice cup right to 30 degree and put it up to make the body separated, put

the juice into cup. Continue working, must do it according to the contrary above steps

- One hand fix the juice cup, the other one handle the filter firmly, make it to be separated from juice cup completely and turn the filter to make the leaving into rubbish tube when you use this machinery; continue working, must put the filter on the juice cup.
- This appliance can adjust the move filter according as how much the fruit's Tendon, five shift is more and the first shift is few. First shift extracted the fruit is usually pure.
- This appliance have two extracted head , if you extracted big fruit can use extracted cover
- Do not put the whole or parts of body into water
- To unplug the appliance before changing accessories or approaching parts which move in use.

### **Clean and care**

- When you cleaning ,please pull the cord first, take filter and separate the move filter ,revolve the cup at right direction ,pull the transmit axes and cleaning one by one with water, when the parts dry, install step is reverse unpick and wash
- Covered the cup cover and store in ark after cleaning
- To avoid the risk of electric shock, short circuiting and ignition of fire, do not clean the base unit or power cord with water, and do not immerse them in water.
- All assemble parts (except the base unit - motor unit with power cord) can be cleaned in dishwasher.
- When clean accessory parts with hot water, the temperature should not exceed 70 ° C. Do not use any astringent or abrasive cleaning agents.

### **Warranty Information**

The manufacturer provides warranty in accordance with the legislation of the customer's own country of residence, with a minimum of 1 year (Germany: 2 years), starting from the date on which the appliance is sold to the end user.

The warranty only covers defects in material or workmanship.

The repairs under warranty may only be carried out by an authorized service centre. When making a claim under the warranty, the original bill of purchase (with purchase date) must be submitted.

The warranty will not apply in cases of:

- Normal wear and tear
- Incorrect use, e.g. overloading of the appliance, use of non-approved accessories
- Use of force, damage caused by external influences
- Damage caused by non-observance of the user manual, e.g. connection to an unsuitable mains supply or non-compliance with the installation instructions
- Partially or completely dismantled appliances

#### Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

#### Technology Parameter

Model name: EJ-J415-WH

Voltage: 220-240V/50Hz-60Hz

Power: 40W

Capacity: 1.5L

