

SHARP



NỒI NẤU ĐA NĂNG MULTI COOKER

KN-MC90V-ST

Vui lòng đọc kỹ hướng dẫn này trước
khi sử dụng thiết bị

Please read these instructions carefully
before operating the appliance.

HƯỚNG DẪN SỬ DỤNG
OPERATION MANUAL


HƯỚNG DẪN AN TOÀN QUAN TRỌNG:

1. Đọc kỹ tất cả các hướng dẫn sử dụng.
2. Trước khi sử dụng thiết bị, hãy kiểm tra xem điện áp đầu ra có tương thích với ổ cắm tiện lợi (220V a.c.) hay không.
3. Không sử dụng ổ cắm hai chiều với thiết bị khác.
4. Không sử dụng thiết bị bất kỳ có dây hoặc phích cắm bị hỏng. Nếu dây bị hỏng thì phải thay thế dây cùng loại và kích thước hoặc mang thiết bị đến Trung tâm bảo hành ủy quyền gần nhất.
5. Không đặt thiết bị gần nồi ga, lò đốt điện hoặc trong lò nướng, hoặc gần bề mặt nóng.
6. Đặt thiết bị trên mặt phẳng; không để gần mép bàn để tránh xảy ra tai nạn.
7. Người (bao gồm cả trẻ em) bị suy giảm khả năng thể chất, giác quan hoặc tinh thần, hoặc thiếu kinh nghiệm và kiến thức không được phép sử dụng thiết bị này, trừ khi họ được người chịu trách nhiệm về sự an toàn của họ giám sát hoặc hướng dẫn về việc sử dụng thiết bị.
8. Trẻ em phải được giám sát để đảm bảo rằng chúng không nghịch thiết bị.
9. Phải hết sức thận trọng khi sử dụng thiết bị có chứa nước nóng sôi trong nồi đa năng.
10. Không để dây chạm vào bề mặt nóng của thiết bị.
11. Để bảo vệ chống điện giật, không nhúng đế nguồn thiết bị vào nước hoặc bất kỳ chất lỏng nào khác.
12. Luôn đậy kín nắp và không nhấc vung nồi khi nước trong nồi đa năng đang sôi. Có thể xảy ra hiện tượng đóng cặn nếu mở nắp trong quá trình nấu. Không chạm vào bề mặt nóng của nồi cơm điện.
13. Để thiết bị nguội trước khi vệ sinh.
14. Không dùng ngoài trời.
15. Không vệ sinh nồi ở trong máy rửa bát.
16. Chỉ mang hoặc di chuyển nồi đa năng bằng tay cầm.


TIÊU CHUẨN KỸ THUẬT:

MODEL SỐ:	KN-MC90V-ST
CÔNG SUẤT:	1000W
DUNG TÍCH:	9.0L
Điện áp:	220V a.c. 50Hz

MÔ TẢ CÁC BỘ PHẬN:

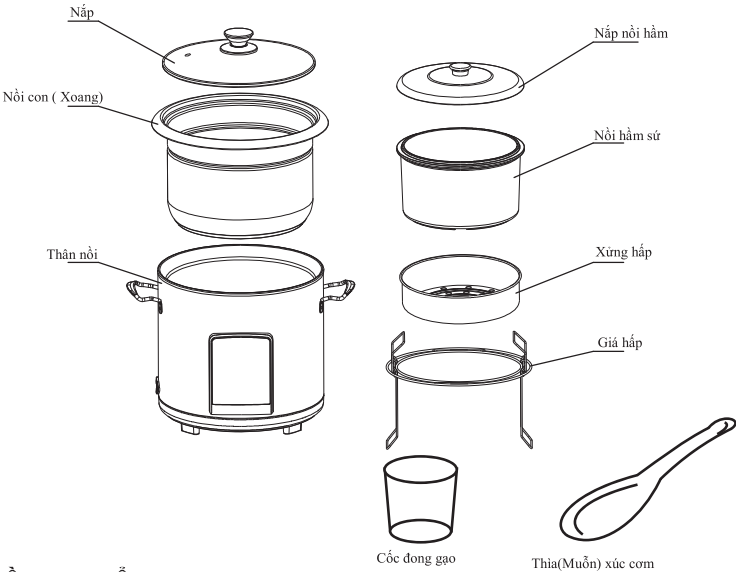

BẢNG ĐIỀU KHIỂN:

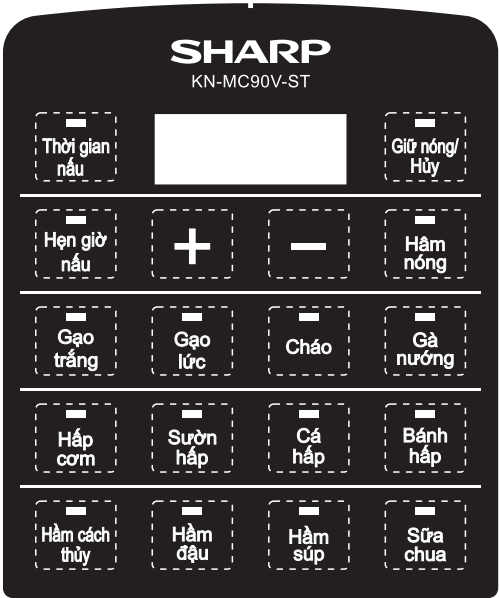

Các Chức Năng của nồi đa năng :

1. Chế độ nguồn chờ:

Khi bật nguồn, nồi sẽ phát ra âm thanh "Bíp" một lần. Tất cả các đèn báo sẽ tiếp tục nhấp nháy trong 1 giây.

Đồng thời, màn hình kỹ thuật số sẽ hiển thị "8.8". Sau đó, nồi sẽ chuyển sang Chế độ chờ. Khi ở chế độ chờ, tất cả các đèn báo sẽ không sáng, màn hình kỹ thuật số sẽ hiển thị "-.-".

2. Chế độ chờ:

Tự động chuyển sang Chế độ chờ sau 1 phút không hoạt động khi tắt cả các đèn tắt. Tự động quay lại chế độ Vận Hành một lần nữa bằng cách chạm vào phím bất kỳ (không có tiếng bip).

3. Chế độ Vận Hành:

Trượt từ trái sang phải để kích hoạt lại bảng điều khiển (tiếng bip). Quay lại chế độ Vận Hành (trạng thái để chọn phím chức năng) sau 1 giây sau khi bật tất cả, quay lại Chế độ chờ một lần nữa sau 1 phút không hoạt động trong chế độ Vận Hành (trạng thái chọn phím chức năng).

4. Chương trình Hẹn giờ nấu:

-Khi nấu Com trắng, Gạo lứt, Cháo, Gà chiên, Hấp com, Sườn hấp, Cá hấp, Bánh hấp, Món hầm, Món tráng miệng, Súp, Sữa chua máy có thể chuyển sang chế độ cài đặt trước khi nhấn nút "Hẹn giờ nấu".

- Khi các chức năng nấu bạn muốn đã được chọn hoặc thời gian nấu đã được điều chỉnh, nếu nhấn nút "Hẹn giờ nấu" trong vòng 5 giây, nồi com điện sẽ phát ra âm thanh Bíp một lần, sau đó sẽ chuyển sang trạng thái cài đặt trước. Màn hình kỹ thuật số hiển thị thời gian mặc định là 4 giờ. (4 giờ là thời gian kết thúc tình trạng hẹn giờ nấu). Đèn báo "Hẹn giờ nấu" sẽ sáng.

-Nhấn lại nút "Hẹn giờ nấu" trong vòng 5 giây, bạn có thể điều chỉnh thời gian hẹn giờ trong khoảng 1-24 giờ, mỗi lớp 5 phút. Nồi sẽ tự động chuyển sang trạng thái làm việc hẹn giờ nếu không nhấn nút này trong 5 giây. Đèn báo " Hẹn giờ nấu " sẽ sáng.

-Khi chương trình "Hẹn giờ nấu" đang hoạt động, thời gian cho "Hẹn giờ nấu" mà bạn chọn đang đếm ngược.

Đèn báo " Hẹn giờ nấu " sẽ tắt ngay sau khi đạt đến thời gian mặc định bạn chọn. Sau đó nồi sẽ thực hiện chức năng mà bạn đã thiết lập. Đèn tương ứng với các chức năng sẽ sáng.

5. Hâm nóng:

Khi ở chế độ Vận Hành, nhấn nút "Hâm nóng ", nồi sẽ kêu một tiếng Bíp. Đèn báo Hâm nóng sẽ nhấp nháy trong 5 giây. Sau đó, chức năng Hâm nóng bắt đầu. Màn hình kỹ thuật số hiển thị thời gian mặc định là 25 phút. (Nếu nhấn lại " Hâm nóng " trong vòng 5 giây, có thể thực hiện điều chỉnh thời gian nấu). Thời gian nấu 10 phút ~ 1 giờ, 1 phút mỗi lần nhấn.

Nếu không nhấn nút " Hâm nóng " cho đến 5 giây, nồi sẽ tự động vận hành chức năng này. Đèn báo " Hâm nóng " sẽ tiếp tục sáng. Màn hình kỹ thuật số sẽ đếm ngược và hiển thị thời gian nấu tương ứng.

6. Com trắng :

Khi ở chế độ Vận Hành, nhấn nút "Com trắng", nồi sẽ kêu một tiếng Bíp. Đèn báo Com trắng sẽ nhấp nháy trong 5 giây. Sau đó, chức năng Com trắng bắt đầu. Màn hình kỹ thuật số sẽ hiển thị "[]" theo chiều kim đồng hồ. Đèn báo "Com trắng" sẽ tiếp tục sáng.

7. Cơm gạo lứt:

Khi ở Chế độ Vận hành, nhấn nút "Gạo lứt", nồi sẽ kêu một tiếng Bíp. Đèn báo Gạo lứt sẽ nhấp nháy trong 5 giây. Sau đó chức năng Gạo lứt bắt đầu.

Màn hình kỹ thuật số sẽ hiển thị "[]" theo chiều kim đồng hồ. Đèn báo "Gạo lứt" sẽ tiếp tục sáng.

8. Cháo:

Khi ở chế độ Vận Hành, nhấn nút "Cháo", nồi sẽ kêu một tiếng Bíp. Đèn báo Cháo sẽ nhấp nháy trong 5 giây. Sau đó, chức năng Cháo bắt đầu. Màn hình kỹ thuật số hiển thị thời gian mặc định là 90 phút. (Nếu nhấn lại "Cháo" trong vòng 5 giây, có thể thực hiện điều chỉnh thời gian nấu cháo). Thời gian nấu cháo 30 phút ~ 4 giờ, mỗi lần nhấn là 10 phút.

Nếu không nhấn nút "Cháo" trong 5 giây, chức năng này sẽ tự động hoạt động. Đèn báo "Cháo" sẽ tiếp tục sáng. Màn hình kỹ thuật số sẽ đếm ngược và hiển thị thời gian nấu tương ứng.

9. Gà Chiên:

Khi ở chế độ Vận Hành, nhấn nút "Gà Chiên", nồi sẽ kêu một tiếng Bíp. Đèn báo Gà Chiên sẽ nhấp nháy trong 5 giây. Khi đó chức năng Gà Chiên bắt đầu. Màn hình kỹ thuật số hiển thị thời gian mặc định là 75 phút. (Nếu nhấn lại "Gà Chiên" trong vòng 5 giây, có thể thực hiện điều chỉnh thời gian nướng). Thời gian nấu Gà Chiên 40 phút ~ 2 giờ, mỗi lần nhấn là 5 phút.

Nếu không nhấn nút "Gà Chiên" cho đến 5 giây, chức năng này sẽ hoạt động tự động. Đèn báo "Gà Chiên" sẽ tiếp tục sáng. Màn hình kỹ thuật số sẽ đếm ngược và hiển thị thời gian nấu tương ứng.

10. Cơm hấp:

Khi ở chế độ Vận Hành, nhấn nút "Cơm hấp", nồi sẽ kêu một tiếng Bíp. Đèn báo Cơm hấp sẽ nhấp nháy trong 5 giây. Sau đó, chức năng Cơm hấp bắt đầu. Thời gian đếm ngược xuất hiện trên màn hình sẽ không hiển thị cho đến khi còn lại 45 phút cuối cùng. (Nếu nhấn lại "Cơm hấp" trong vòng 5 giây, có thể thực hiện điều chỉnh thời gian nấu). Thời gian hấp 10 phút ~ 2 giờ, mỗi lần nhấn là 1 phút. Nếu không nhấn nút "Hấp cơm" trong 5 giây, chức năng này sẽ tự động hoạt động. Màn hình kỹ thuật số sẽ hiển thị "[]" theo chiều kim đồng hồ. Đèn báo "Hấp cơm" sẽ tiếp tục sáng.

11. Sườn hấp:

Khi ở Chế độ chủ động, nhấn nút "Sườn hấp", nồi sẽ kêu một tiếng Bíp. Đèn báo Sườn hấp sẽ nhấp nháy trong 5 giây. Sau đó, chức năng Sườn hấp bắt đầu. Thời gian đếm ngược xuất hiện trên màn hình sẽ không hiển thị cho đến khi còn 10 phút cuối cùng. (Nếu nhấn lại "Sườn hấp" trong vòng 5 giây, có thể thực hiện điều chỉnh thời gian nấu hơi). Thời gian hấp 10 phút ~ 2 giờ, mỗi lần nhấn là 1 phút.

Nếu không nhấn nút "Sườn hấp" trong 5 giây, máy sẽ tự động vận hành chức năng này. Màn hình kỹ thuật số sẽ hiển thị "[]" theo chiều kim đồng hồ. Đèn báo "Sườn hấp" sẽ tiếp tục chiếu sáng.

12. Cá hấp:

Khi ở chế độ Vận Hành, nhấn nút "Cá hấp", nồi sẽ kêu một tiếng Bíp. Đèn báo Cá hấp sẽ nhấp nháy trong 5 giây. Sau đó, chức năng Cá hấp bắt đầu. Thời gian đếm ngược xuất hiện trên màn hình sẽ không hiển thị cho đến khi còn lại 15 phút cuối cùng. (Nếu nhấn lại "Cá hấp" trong vòng 5 giây, có thể thực hiện điều chỉnh thời gian hấp). Thời gian hấp 10 phút ~ 2 giờ, mỗi lần nhấn là 1 phút.

Nếu không nhấn nút "Hấp cá" cho đến 5 giây, sẽ hoạt động chức năng này tự động. Màn hình kỹ thuật số sẽ hiển thị "[]" theo chiều kim đồng hồ. Đèn báo "Cá hấp" sẽ tiếp tục sáng.

13. Bánh hấp :

Khi ở chế độ Vận Hành, nhấn nút "Bánh hấp", nồi sẽ kêu một tiếng Bíp. Đèn báo Bánh hấp sẽ nhấp nháy trong 5 giây. Sau đó, chức năng Bánh hấp bắt đầu. Thời gian đếm ngược xuất hiện trên màn hình sẽ không hiển thị cho đến khi còn 12 phút cuối cùng. (Nếu nhấn lại "Bánh hấp" trong vòng 5 giây, có thể thực hiện việc điều chỉnh thời gian nấu bằng hơi nước).

Thời gian hấp 10 phút ~ 2 giờ, mỗi lần nhấn là 1 phút. Nếu không nhấn nút " **Bánh hấp** " trong 5 giây, chức năng này sẽ tự động hoạt động. Màn hình kỹ thuật số sẽ hiển thị "[]" theo chiều kim đồng hồ. Đèn báo "Bánh hấp" sẽ tiếp tục sáng.

14. Hầm cách thủy:

Khi ở chế độ Vận Hành, nhấn nút " **Hầm cách thủy** ", nồi sẽ kêu một tiếng Bíp.


Đèn báo **Hầm cách thủy** sẽ nhấp nháy trong 5 giây. Sau đó, chức năng **Hầm cách thủy** bắt đầu. Màn hình kỹ thuật số hiển thị thời gian mặc định là 4 giờ.

(Nếu nhấn lại " **Hầm cách thủy** " trong vòng 5 giây, có thể điều chỉnh thời gian nấu).

Thời gian nấu từ 2 ~ 8 giờ, mỗi lần nhấn là 10 phút.

Nếu không nhấn nút " **Hầm cách thủy** " cho đến 5 giây, chức năng này sẽ hoạt động tự động. Đèn báo " **Hầm cách thủy** " sẽ tiếp tục sáng. Màn hình kỹ thuật số sẽ đếm ngược và hiển thị thời gian nấu tương ứng.

Lưu ý: Vui lòng thêm nước ít nhất phải ngang bằng vạch "Stew (Hầm)". Đây là lượng nước tối thiểu tại thời điểm mặc định là 4 giờ.

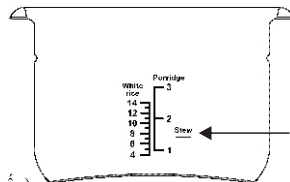

15. Hầm đậu:

Khi ở chế độ Vận Hành, nhấn nút " **Hầm đậu** ", nồi sẽ kêu một tiếng Bíp. Đèn báo **Hầm đậu** sẽ nhấp nháy trong 5 giây. Sau đó, chức năng **Hầm đậu** món trắng miệng bắt đầu. Màn hình kỹ thuật số hiển thị thời gian mặc định là 2 giờ. (Nếu nhấn lại " **Hầm đậu** " trong vòng 5 giây, có thể thực hiện việc điều chỉnh thời gian nấu). Thời gian hấp 30 phút ~ 4 giờ, mỗi lần nhấn là 10 phút.

Nếu không nhấn nút " **Hầm đậu** " cho đến 5 giây, chức năng này sẽ tự động hoạt động. Đèn báo "Món trắng miệng hầm" sẽ tiếp tục sáng. Màn hình kỹ thuật số sẽ đếm ngược và hiển thị thời gian nấu tương ứng.

16. Súp:

Khi ở chế độ Vận Hành, nhấn nút "Súp", nồi sẽ kêu một tiếng Bíp. Đèn báo Súp sẽ nhấp nháy trong 5 giây. Sau đó, chức năng nấu Súp bắt đầu. Màn hình kỹ thuật số hiển thị thời gian mặc định là 90 phút. (Nếu nhấn lại "Súp" trong vòng 5 giây, có thể thực hiện điều chỉnh thời gian nấu). Thời gian nấu 30 phút ~ 4 giờ, 10 phút mỗi lớp.

Nếu không nhấn nút "Súp" cho đến 5 giây, chức năng này sẽ hoạt động tự động. Đèn báo "Súp" sẽ tiếp tục sáng. Màn hình kỹ thuật số sẽ đếm ngược và hiển thị thời gian nấu tương ứng.

17. Sữa chua:

Khi ở chế độ Vận Hành, nhấn nút "Sữa chua", nồi sẽ kêu một tiếng Bíp. Đèn báo Sữa chua sẽ nhấp nháy trong 5 giây. Sau đó, chức năng làm Sữa chua bắt đầu. Màn hình kỹ thuật số hiển thị thời gian mặc định là 8 giờ. (Nếu nhấn lại "Sữa chua" trong vòng 5 giây, có thể thực hiện việc điều chỉnh thời gian nấu). Thời gian nấu 6 ~ 12 giờ, mỗi lần nhấn là 10 phút.

Nếu không nhấn nút "Sữa chua" trong 5 giây, chức năng này sẽ tự động hoạt động. Đèn báo "Sữa chua" sẽ tiếp tục sáng. Màn hình kỹ thuật số sẽ đếm ngược và hiển thị thời gian nấu tương ứng.

18. Giữ ấm/Hủy bỏ:

*** Giữ ấm:**

Khi ở chế độ Vận Hành, nhấn nút "Giữ ấm/Hủy bỏ", nồi sẽ kêu một tiếng Bíp. Sau đó, sẽ chuyển sang trạng thái Giữ ấm với đèn "Giữ ấm/Hủy bỏ". Màn hình kỹ thuật số sẽ hiển thị "0.0" theo chiều kim đồng hồ, không điều chỉnh thời gian.

Khi hoàn thành tất cả các chức năng nấu, nồi sẽ chuyển sang trạng thái giữ ấm. nồi sẽ phát ra âm thanh Bíp 5 lần. Đèn báo giữ ấm sẽ tiếp tục chiếu sáng. Màn hình kỹ thuật số sẽ hiển thị "0.0" theo chiều kim đồng hồ và thời gian bắt đầu.

*** Hủy bỏ:**

Khi nồi ở bất kỳ trạng thái nấu bất kỳ, hoặc khi chọn các chức năng, hoặc khi ở trạng thái giữ ấm, nếu nhấn nút "Giữ ấm/Hủy bỏ", nồi sẽ hủy mọi hoạt động và trở về chế độ chờ.

BẢNG THÔNG SỐ:

Chức năng	Thời gian mặc định	Phạm vi thời gian	Tăng dần (Min)	Thời gian đếm ngược xuất hiện trên màn hình	Chuyển sang chế độ giữ ấm sau khi hoàn thành chương trình
Cơm trắng	N/A	N/A	N/A	Sẽ không hiển thị cho đến khi còn 14 phút	Có
Cơm gạo lức	N/A	N/A	N/A	Sẽ không hiển thị cho đến khi còn 12 phút	Có
Cháo	90 phút	30 phút ~ 4 giờ	10	Đếm ngược ngay lập tức khi bắt đầu nấu	Có
Gà Chiên	75 phút	40 phút ~ 2 giờ	5	Đếm ngược ngay lập tức khi bắt đầu nấu	Có
Cơm hấp	N/A	10 phút ~ 2 giờ	1	Sẽ không hiển thị cho đến khi còn 45 phút	Có
Sườn hấp	N/A	10 phút ~ 2 giờ	1	Sẽ không hiển thị cho đến khi còn 10 phút	Có
Cá hấp	N/A	10 phút ~ 2 giờ	1	Sẽ không hiển thị cho đến khi còn 15 phút	Có
Bánh hấp	N/A	10 phút ~ 2 giờ	1	Sẽ không hiển thị cho đến khi còn 12 phút	Có
Hầm cách thủy	4 tiếng	2 ~ 8 giờ	10	Đếm ngược ngay lập tức khi bắt đầu nấu	Có
Hầm đậu	2 tiếng	30 phút ~ 4 giờ	10	Đếm ngược ngay lập tức khi bắt đầu nấu	Có
Súp	90 phút	30 phút ~ 4 giờ	10	Đếm ngược ngay lập tức khi bắt đầu nấu	Có
Sữa chua	8 tiếng	6 ~ 12 giờ	10	Đếm ngược ngay lập tức khi bắt đầu nấu	Không
Hầm nóng	25 phút	10 phút ~ 1 giờ	1	Đếm ngược ngay lập tức khi bắt đầu nấu	Có

LÀM SẠCH VÀ BẢO TRÌ:

Luôn làm vệ sinh đúng cách có thể giúp bạn bảo dưỡng thiết bị để tránh những tổn thất không đáng có.

1. Luôn rút phích cắm của thiết bị sau khi sử dụng và để thiết bị nguội hoàn toàn trước khi vệ sinh.
2. Không dùng muối kim loại để xúc cơm vì nồi có thể bị hỏng. Luôn sử dụng muỗng cơm được cung cấp.
3. Không sử dụng miếng cọ rửa hoặc bàn chải cứng để làm sạch nồi đa năng của bạn. Nồi thép không gỉ có thể được làm sạch bằng nước xà phòng với miếng bọt biển hoặc vải mềm.
4. Lau các bề mặt bên ngoài bằng khăn ẩm.
5. Kiểm tra để đảm bảo không có vật lạ ở phần bên trong của nồi đa năng, mâm phát nhiệt hoặc bộ cảm biến nhiệt trung tâm. Loại bỏ vật lạ nếu tìm thấy. Lau sạch bề mặt bằng khăn ẩm.
6. Loại bỏ cặn bẩn khỏi bộ thu hơi nước sau mỗi lần sử dụng.




IMPORTANT MPORTANT SAFEGUARD:

1. Read all instructions carefully.
2. Before using the unit, check if the voltage indicated corresponds with the convenience outlet (220Va.c.).
3. Do not use the two-way socket with other appliance.
4. Do not use any appliance with a damaged cord or plug. If the cord is damaged it should be replaced with the same type and size or bring the unit to the nearest authorized service center.
5. Do not place the unit near a gas stove, an electric burner or in a heated oven, or near hot surface.
6. Place the unit on a stable surface; keep it away from the edge of the counter to avoid accidents.
7. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliances by a person responsible for their safety.
8. Children should be supervised to ensure that they do not play with the appliance.
9. Extreme caution must be exercised when using an appliance containing boiling hot water in the multi-cooker.
10. Do not allow the cord to touch the hot surface of the unit.
11. For protection against electric shock, do not immerse the unit including the power base in water or any other liquid.
12. Always ensure that the lid is closed and do not lift it while the water in the multi-cooker is boiling. Scalding may occur if the lid is removed during the cooking cycle. Do not touch the hot surfaces of the rice cooker.
13. Allow the unit to cool down before cleaning.
14. Not intended for outdoor use.
15. No parts are dishwasher safe.
16. Carry or move the multi-cooker only by its handle.


SPECIFICATION:

MODEL NO.:	KN-MC90V-ST
POWER:	1000W
CAPACITY:	9.0L
Votage :	220Va.c. 50Hz

DESCRIPTION OF PARTS:

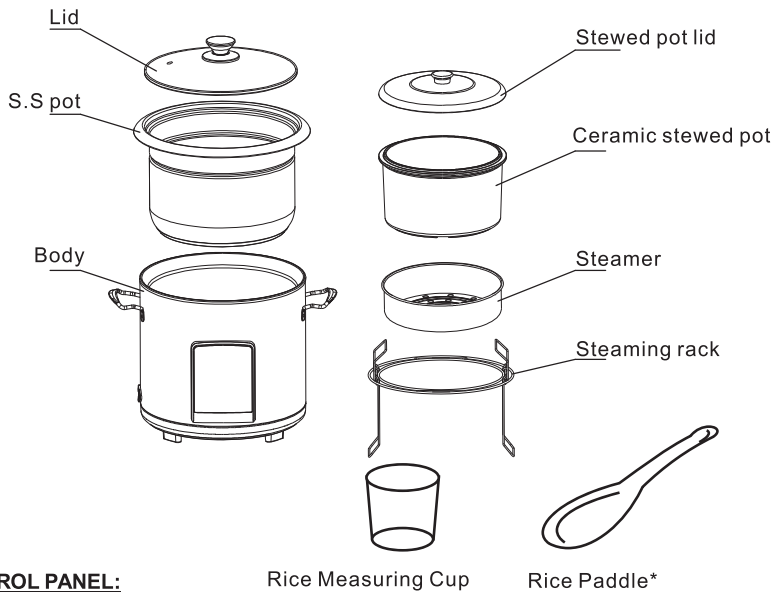

CONTROL PANEL:

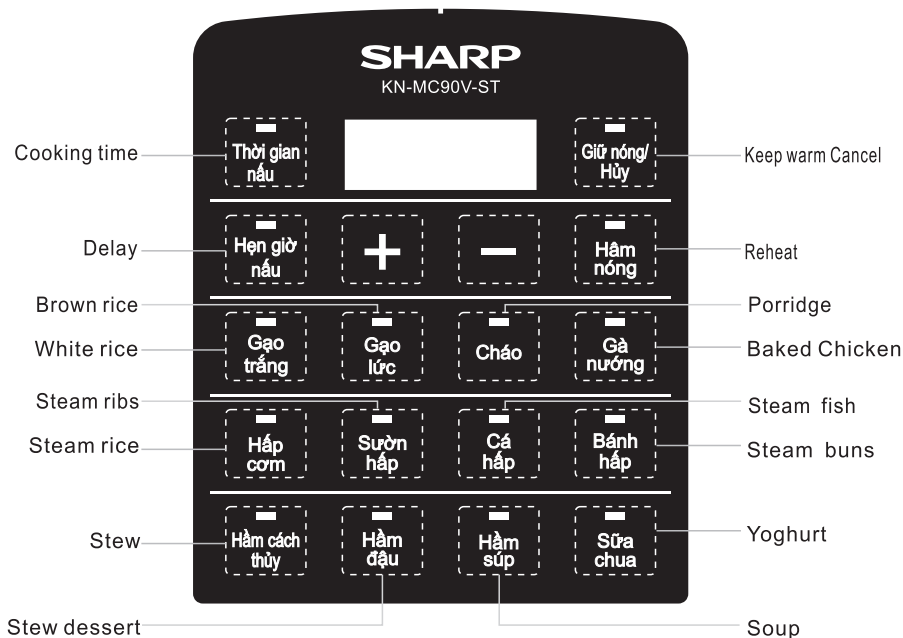

FUNCTIONS:

1.Power standby mode

When power in on, the cooker will emit "Beep" sound once. All the indicator lamps will keep blinking for 1 second.

At the meantime, the digital display will show "8.8". After that, the cooker will enter stand-by mode. When under stand-by mode, all the indicator lamps will not light up, the digital display will show "-.-".

2.Standby Mode

Automatically switch to Standby Mode after 1 minute idle with all lights off. Auto returned to Active Mode again by touch any key (with no beep)

3.Active Mode

Slide from left to right to reactivate (beep) panel. Return to Active Mode (status to select function key) in 1 second after all lights on, return to Standby Mode again after 1 minute idle under Active Mode (status to select function key).

4.Delay program

-When white rice, brown rice, porridge, baked chicken, steam rice, steam ribs, steam fish, steam buns, stew, stew dessert, soup, yogurt operation, it can enter into preset mode when pressing "Delay" button.

-When the cooking functions you want has been selected or cooking time has been adjusted, if pressing the "Delay" button within 5 seconds, the rice cooker will emit Beep sound once, then it will enter into preset status. The digital display shows the default time of 4 hours. (4 hours is the end time of delay cooking status). The "Delay" indicator lamp will light up.

-Press the "Delay" button again within 5 seconds, you can adjust the delay time between 1-24hours, 5 minutes each grade. The cooker will automatically enter into delay working status if not pressing this button in 5 seconds. The "Delay" indicator lamp will light up.

-When the "Delay" is operating, the time for "Delay" you select is counting down. The "Delay" indicator lamp will turn off, as soon as it reaches the default time you select. Then the cooker will execute the function you have set. The respective lamp toward the function will light up.

5.Reheat

When under Active Mode, press "Reheat" button, the cooker will emit Beep sound once. The Reheat indicator lamp will blink for 5 seconds. Then the Reheat function begins. The digital display shows the default time of 25 minutes. (If re-pressing the "Reheat" within 5 seconds, it can make the adjustment of the cooking time). The cooking time 10 min~ 1 hour, 1 minutes each grade.

If not pressing the "Reheat" button until 5 seconds, it will operate this function automatically. The "Reheat" indicator lamp will keep lighting. The digital display will count down and show the respective cooking time.

6. White rice

When under Active Mode, press "White rice" button, the cooker will emit Beep sound once. The white rice indicator lamp will blink for 5 seconds. Then the White rice function begins. The digital display will show "[]" clockwise. The "White rice" indicator lamp will keep lighting.

7. Brown rice

When under Active Mode, press "Brown rice" button, the cooker will emit Beep sound once.

The Brown rice indicator lamp will blink for 5 seconds. Then the Brown rice function begins. The digital display will show "[]" clockwise. The "Brown rice" indicator lamp will keep lighting.

8. Porridge

When under Active Mode, press "Porridge" button, the cooker will emit Beep sound once. The Porridge indicator lamp will blink for 5 seconds. Then the Porridge function begins. The digital display shows the default time of 90minutes. (If re-pressing the "Porridge" within 5 seconds, it can make the adjustment of the porridge cooking time). The porridge cooking time 30 minutes~4 hours, 10 minutes each grade.

If not pressing the "Porridge" button until 5 seconds, it will operate this function automatically. The "Porridge" indicator lamp will keep lighting. The digital display will count down and show the respective cooking time.

9. Baked chicken

When under Active Mode, press "Baked chicken" button, the cooker will emit Beep sound once. The Baked chicken indicator lamp will blink for 5 seconds. Then the Baked chicken function begins. The digital display shows the default time of 75 minutes. (If re-pressing the "Baked chicken" within 5 seconds, it can make the adjustment of the bake cooking time). The Baked chicken cooking time 40 minutes~2 hours, 5 minutes each grade.

If not pressing the "Baked chicken" button until 5 seconds, it will operate this function automatically. The "Baked chicken" indicator lamp will keep lighting. The digital display will count down and show the respective cooking time.

10. Steam rice

When under Active Mode, press "Steam rice" button, the cooker will emit Beep sound once. The Steam rice indicator lamp will blink for 5 seconds. Then the Steam rice function begins. Countdown time appears on display will not show until last 45mins remaining. (If re-pressing the "Steam rice" within 5 seconds, it can make the adjustment of the steam cooking time). The steaming cooking time 10 minutes~2 hours, 1 minutes each grade.

If not pressing the "Steam rice" button until 5 seconds, it will operate this function automatically. The digital display will show "[]" clockwise. The "Steam rice" indicator lamp will keep lighting.

11. Steam ribs

When under Active Mode, press "Steam ribs" button, the cooker will emit Beep sound once. The Steam ribs indicator lamp will blink for 5 seconds. Then the Steam ribs function begins. Countdown time appears on display will not show until last 10mins remaining. (If re-pressing the "Steam ribs" within 5 seconds, it can make the adjustment of the steam cooking time). The steaming cooking time 10 minutes~2 hours, 1 minutes each grade.

If not pressing the "Steam ribs" button until 5 seconds, it will operate this function automatically. The digital display will show "[]" clockwise. The "Steam ribs" indicator lamp will keep lighting.

12. Steam fish

When under Active Mode, press "Steam fish" button, the cooker will emit Beep sound once. The Steam fish indicator lamp will blink for 5 seconds. Then the Steam fish function begins. Countdown time appears on display will not show until last 15mins remaining. (If re-pressing the "Steam fish" within 5 seconds, it can make the adjustment of the steam cooking time). The steaming cooking time 10 minutes~2 hours, 1 minutes each grade.

If not pressing the "Steam fish" button until 5 seconds, it will operate this function automatically. The digital display will show "[]" clockwise. The "Steam fish" indicator lamp will keep lighting.

13. Steam buns

When under Active Mode, press "Steam buns" button, the cooker will emit Beep sound once. The Steam buns indicator lamp will blink for 5 seconds. Then the Steam buns function begins. Countdown time appears on display will not show until last 12mins remaining. (If re-pressing the "Steam buns" within 5 seconds, it can make the adjustment of the steam cooking time). The steaming cooking time 10 minutes~2 hours, 1 minutes each grade.


If not pressing the "Steam buns" button until 5 seconds, it will operate this function automatically. The digital display will show "[]" clockwise. The " Steam buns" indicator lamp will keep lighting.

14. Stew

When under Active Mode, press "Stew" button, the cooker will emit Beep sound once. The Stew indicator lamp will blink for 5 seconds. Then the Stew function begins. The digital display shows the default time of 4 hours. (If re-pressing the "Stew" within 5 seconds, it can make the adjustment of the steam cooking time). The steaming cooking time 2 ~ 8 hours, 10 minutes each grade.

If not pressing the "Stew" button until 5 seconds, it will operate this function automatically. The "Stew" indicator lamp will keep lighting. The digital display will count down and show the respective cooking time.

Note: Please add the water no less than "Stew" . This is the minimum amount of water at the default time of 4 hours.

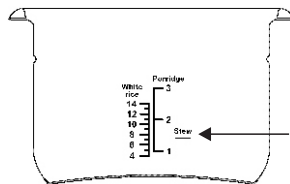

15. Stew dessert

When under Active Mode, press "Stew dessert" button, the cooker will emit Beep sound once. The Stew indicator lamp will blink for 5 seconds. Then the Stew dessert function begins. The digital display shows the default time of 2 hours. (If re-pressing the "Stew dessert" within 5 seconds, it can make the adjustment of the steam cooking time). The steaming cooking time 30 minutes ~ 4 hours, 10 minutes each grade.

If not pressing the "Stew dessert " button until 5 seconds, it will operate this function automatically. The "Stew dessert " indicator lamp will keep lighting. The digital display will count down and show the respective cooking time.

16. Soup

When under Active Mode, press "Soup" button, the cooker will emit Beep sound once. The Soup indicator lamp will blink for 5 seconds. Then the Soup function begins. The digital display shows the default time of 90 minutes. (If re-pressing the "Soup" within 5 seconds, it can make the adjustment of the cooking time). The cooking time 30 minutes ~ 4 hours, 10 minutes each grade.

If not pressing the "Soup " button until 5 seconds, it will operate this function automatically. The "Soup " indicator lamp will keep lighting. The digital display will count down and show the respective cooking time.

17. Yoghurt

When under Active Mode, press "Yoghurt" button, the cooker will emit Beep sound once. The Yoghurt indicator lamp will blink for 5 seconds. Then the Yoghurt function begins. The digital display shows the default time of 8 hours. (If re-pressing the "Yoghurt" within 5 seconds, it can make the adjustment of the cooking time). The cooking time 6 ~ 12 hours, 10 minutes each grade.

If not pressing the "Yoghurt" button until 5 seconds, it will operate this function automatically.

The "Yogurt " indicator lamp will keep lighting. The digital display will count down and show the respective cooking time.

18. Keep warm / Cancel

-Keep warm

When under Active Mode, press "Keep warm/Cancel" button, the cooker will emit Beep sound once. Then it will enter into keep warm status with the "Keep warm/Cancel" lamp lighting. The digital display will show "0.0" clockwise, no time adjustment.

When all cooking functions are finished, the cooker will enter the keep warm status. The cooker will emit Beep sound 5 times. The keep warm indicator lamp will keep lighting. The digital display will show "0.0" clockwise and beginning timing.

-Cancel

When the cooker is in any cooking status, or when choosing functions, or when in keeping warm status, if pressing "Keep warm/Cancel" button, the cooker will cancel all operations and get back to standby mode.

PARAMETER TABLE:

Function	Default Time	Time Range	Increment (Min)	Countdown time appears on display	Switch to keep warm after program completed
White Rice	N/A	N/A	N/A	Will not show until last 14mins remaining	Yes
Brown Rice	N/A	N/A	N/A	Will not show until last 12mins remaining	Yes
Porridge	90 min	30 min ~ 4 hours	10	countdown immediately when start cooking	Yes
Baked chicken	75 min	40 min ~ 2 hours	5	countdown immediately when start cooking	Yes
Steam rice	N/A	10 min ~ 2 hours	1	Will not show until last 45mins remaining	Yes
Steam ribs	N/A	10 min ~ 2 hours	1	Will not show until last 10mins remaining	Yes
Steam fish	N/A	10 min ~ 2 hours	1	Will not show until last 15mins remaining	Yes
Steam buns	N/A	10 min ~ 2 hours	1	Will not show until last 12mins remaining	Yes

Stew	4 hours	2 ~ 8 hours	10	countdown immediately when start cooking	Yes
Stew dessert	2 hours	30 min ~ 4 hours	10	countdown immediately when start cooking	Yes
Soup	90 min	30 min ~ 4 hours	10	countdown immediately when start cooking	Yes
Yoghurt	8 hours	6 ~ 12 hours	10	countdown immediately when start cooking	No
Reheat	25 min	10 min ~ 1 hour	1	countdown immediately when start cooking	Yes

CLEANING AND MAINTENANCE:

Always follow the correct way to clean which can help you maintain the appliance to avoid unnecessary loss.

1. Always unplug the appliance after use and allow the appliance to cool down completely before cleaning.
2. Do not use a metal scoop to scoop out the rice because the pot may get damaged. Always use the rice scoop provided.
3. Do not use abrasive sponges, scouring pads, or stiff brushes to clean your multi-cooker. The stainless steel pot may be cleaned with mild soupy water using sponge of soft cloth.
4. Wipe the exterior surfaces with damp cloth.
5. Check that there are no foreign objects in the inner part of the multi-cooker, heater or the centre thermostat. Remove them if found. Wipe surface with damp cloth.
6. Remove the residue from the dew collector after every use



SHARP®

SHARP CORPORATION